

HUDSON & MANHATTAN RAILROAD COMPANY

Herman T. Stichman, Trustee

SPECIFICATIONS FOR RAPID TRANSIT CARS

SECTION 1 -- DEFINITIONS, SCOPE, INSPECTIONS AND TESTS

- 1.01 Definition of Terms
- 1.02 Scope and Purpose
- 1.03 Responsibilities
- 1.04 Substitutes and Changes
- 1.05 Inspections
- 1.06 Tests and Adjustments
 - (a) Facilities and Requirements
 - (b) Car Wiring Tests
 - (c) Motor and Brake Controller
 - (d) Air Brakes
 - (e) Car Performance Tests
 - (f) Miscellaneous Body Tests and Adjustments

SECTION 2 -- GENERAL DIMENSIONS

- 2.01 General
- 2.02 Dimensions and Design Considerations
- 2.03 Weights

SECTION 3 -- CAR BODY

- 3.01 General
- 3.02 Motorman's Cab
- 3.03 Framing Structure
- 3.04 Bolster
- 3.05 Ventilating Ducts
- 3.06 Roof
- 3.07 Ceiling and Side Lining
- 3.08 Floor
- 3.09 Windows
- 3.10 Seats
- 3.11 Doors
- 3.12 Door Operating Mechanism
- 3.13 Stanchion, Rails, Barriers, Grab Handles and Steps

SECTION 4 -- HEATING, VENTILATING AND AIR CONDITIONING

- 4.01 Car Heating
- 4.02 Cab Heating
- 4.03 Ventilating and Air Conditioning
 - A General
 - B Service Requirements
 - C Air Distribution

- D Refrigeration System
- E Refrigeration Control
- F Heaters
- G Motors and Electrical Equipment

SECTION 5 -- LIGHTING

- 5.01 Interior Lighting
- 5.02 Control of Interior Lights . .
- 5.03 Headlights
- 5.04 Markers and Tail Lights
- 5.05 Destination Sign Lights
- 5.06 Instrument Lights

SECTION 6 -- DOOR CONTROL AND SIGNAL SYSTEM

- 6.01 Door Control
- 6.02 Door Control Switches
- 6.03 Door Control Circuits
- 6.04 Door Control Key Switches
- 6.05 Motorman's Foot Switch
- 6.06 Door Signals
- 6.07 Bell and Buzzer Signal System

SECTION 7 -- MISCELLANEOUS CAR BODY ITEMS

- 7.01 Coil Springs and Safety Chains
- 7.02 Destination and Route Signs
- 7.03 Windshield Wiper and Defroster
- 7.04 Whistle
- 7.05 Fire Extinguishers
- 7.06 Advertising Car Racks
- 7.07 Car Numbers
- 7.08 Miscellaneous Signs

SECTION 8 -- DRAWBAR AND COUPLING EQUIPMENT

- 8.01 Coupling Drawbar
- 8.02 Unlocking Cylinders
- 8.03 Manual Unlocking
- 8.04 Electric Coupler
- 8.05 Drawbar Drum Switch
- 8.06 Uncoupling Valves

SECTION 9 -- TRUCKS

- 9.01 General
- 9.02 Weights and Dimensions
- 9.03 Center Plate
- 9.04 Bolster
- 9.05 Springs
- 9.06 Damping Means
- 9.07 Journal Bearings
- 9.08 Wheels

- 9.09 les
- 9.10 Motors and Transmission
- 9.11 Brakes
- 9.12 Power Rail Contact Shoes and Fuses
- 9.13 Automatic Train Stop Trip Cocks

SECTION 10 -- TRACTION MOTORS AND CONTROL

- 10.01 Traction Motors
- 10.02 Traction Motor Control
- 10.03 Control Accessories

SECTION 11 -- BRAKES

- 11.01 General
- 11.02 Air Brakes
- 11.03 Air Supply System
- 11.04 Brake Cylinders
- 11.05 Emergency Valve
- 11.06 Automatic Train Stop Trip Cocks
- 11.07 Air Piping
- 11.08 Hand Brakes

SECTION 12 -- MISCELLANEOUS ELECTRICAL EQUIPMENT
AND WIRING

- 12.01 Motor-Generator-Blower
- 12.02 Storage Battery
- 12.03 Cab Switch Panels
- 12.04 Power Rail Contact Shoes and Fuses
- 12.05 Grounding and Guarding
- 12.06 Wiring and Conduit

SECTION 13 -- MATERIALS AND WORKMANSHIP

- 13.01 General
- 13.02 Steel
 - (a) Structural and Sheet Steel
 - (b) Axles
 - (c) Steel Castings
 - (d) Stainless Steel
- 13.03 Aluminum
- 13.04 Rubber
 - (a) General
 - (b) Rubber Truck Springs
 - (c) Rubber Stops for Track Brake Spreader,
 for Bolster Bumpers and for Rubber
 Snubbers
 - (d) Rubber Axle Housing Sleeves
 - (e) Rubber Door Edges
 - (f) Rubber for Door and Window Seals and
 Glazing Strips
- 13.05 Safety Glass
- 13.06 Wire and Cable
 - (a) Conductor Material
 - (c) Rubber Insulation
 - (d) Asbestos Insulation
- 13.07 Wiring
- 13.08 Welding
- 13.09 Paint and Painting