CF-105 SERVICE DATA
Electrical System - Canopies CONFIDENTIAL

UNCLASSIFIED

#### ELECTRICAL SYSTEM

## CANOPIES

Section 33.

#### TABLE OF CONTENTS

TITLE	PAGI
SYSTEM SERVICE DATA  DESCRIPTION  General  Canopy Actuation  Canopy Seal Inflation	3 3 3
FUNCTION TESTING (To be issued later)	
INSPECTION (To be issued later)	
COMPONENT SERVICE DATA Front Canopy Actuation Switch Rear Canopy Actuation Switch Canopy External Actuation Switches Latch Limit Switches, Front and Rear Interlock Relays, Internal - 2 Interlock Relays, External - 2 Front Canopy Actuator Rear Canopy Actuator Canopy Seal Valve	5 7 9 11 13 15 17 19

#### LIST OF ILLUSTRATIONS

FIGURE	TITLE	PAGE
1	Canopy Actuation Schematic	2



CONFIDENTIAL

## CF-105 SERVICE DATA

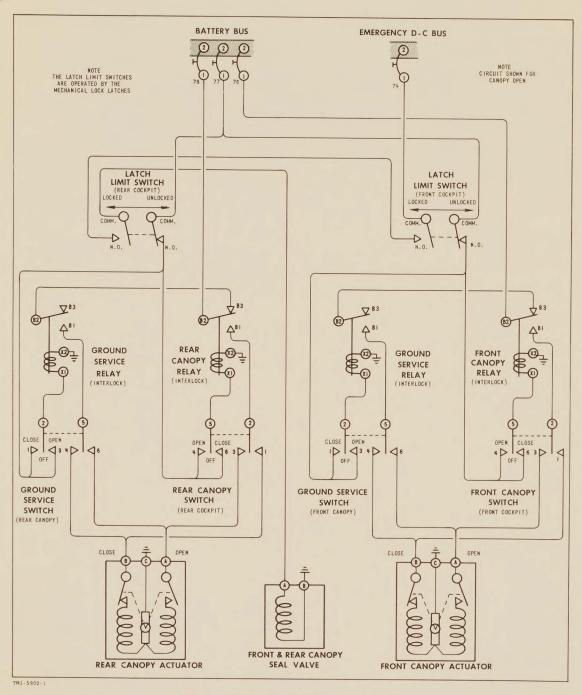


FIG 1 CANOPY ACTUATION SCHEMATIC

#### SYSTEM DATA SHEET

SYSTEM	SUB-SYSTEM	AIRCRAFT EFFTY	REF. NO.
ELECTRICAL	CANOPIES	25201	11-10

#### DESCRIPTION

#### General

1. The front and rear canopies are opened and closed by individual electric actuators operated by a power supply taken from the Battery bus. The inflation and deflation of the canopy seals is controlled by a solenoid valve operated by a power supply taken from the Emergency D-C bus. The canopies are mechanically locked when in the closed position.


#### Canopy Actuation

- 2. Each canopy is controlled by two double-pole, double-throw switches having OPEN-OFF-CLOSE positions. One switch is mounted in each cockpit, and the other two are mounted externally on the canopy arch for ground operation. Interlocking relays are provided to prevent the external switches from acting in opposition to the internal switches.
- 3. The canopy actuators are of the linear type and contain load limit switches to cut off the electrical supply when the canopies are in the fully open or fully closed positions.
- 4. Limit switches actuated by the mechanical lock latches prevent the D-C supply being fed to the actuators before the latches are unlocked.
- 5. An emergency mechanical release is provided for the mechanical lock latches, as the external switches do not override the latches.
- 6. The canopies should only be closed and opened once after each flight using the aircraft battery. If further operation is required a ground power supply should be used.

#### Canopy Seal Inflation

7. The canopy seal inflation valve is solenoid operated by micro-switches actuated by the canopy mechanical lock latches. The solenoid is energized and the canopy seals inflated when the second canopy is latched, and is de-energized to deflate the seals when the first canopy is unlatched.

ISSUE	1				
DATE	5 Dec 56				

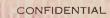

## COMPONENT DATA SHEET

SYSTEM		SUB-SYSTEM		СОМРОМ	NENT	REF. NO.
ELECTRICAL		CANOPIES		Front Canopy A Switch	ctuation	11-10-1
AVRO PART NO.		MANUFACTURER MAN'F'R'S PART NO. AIRC				
		Cutler-Hammer	8	834 K4	252	201
OVERHAUL LIFE:	KNOWI	N-	ES	TIMATED- 500	hours	
FUNCTION	To com	plete the supply circ actuator.	cuits for	the rear		
LOCATION	On pan	el ElO LH console.				
ACCESS			ATTACA .	t data deliminate	,	MEN X MINUTE
	Unobst the co	ructed when panel ElC nsole.	) is rele	ased from		
REPLACEMENT PRO	CEDURE				N	MEN X MINUTE
	Secure	switch on panel ElO. circuit connections. panel ElO to LH conso		ounting screws.		

7#1-3413-2-5

CONFIDENTIASSIFIED

INSPECTIO	NC						MEN	K MINUTES
		action i	the switch s smooth a luggish or	and that t	k that the	e lever d break		
FUNCTION	NAL CHECKS						MEN	X MINUTES
GROUND	HANDLING AND GRO	DUND TEST	EQUIPMEN	Т				
SPECIAL	TOOLS TO REMOVE C	OR SERVICE						
REMARKS	<u> </u>							
ISSUE	1							
DATE	5 Dec 56							

SYSTEM		SUB-SYSTEM		COMPON	IENT		REF. NO.
ELECTRICAL		CANOPIES		Rear Canopy Act	tuation		11-10-2
AVRO PART NO.		MANUFACTURER	MAN'F	R'S PART NO.	AIRCRA	FT EF	ECTIVITY
		Cutler-Hammer	88	334K4		25201	
OVERHAUL LIFE: KN	10 <del>W</del> N	<b>V</b> -	ES	TIMATED- 500	hours		
FUNCTION							
To	comp	lete the power supply	y for the	e rear canopy			
LOCATION							
On	pane	1 E19 LH console.					
ACCESS						MEN	X MINUTES
		ucted when panel E19 sole.	is relea	sed from			
REPLACEMENT PROCED	URE					MEN	X MINUTES
Sec	ure o	witch on panel E19. circuit connections.					
Ref	it pa	anel El9 to LH consol	.e - 4 qu	ick fasteners.			
14,7							1

# UNCLASSIFIED

INSPECT	ION							N	MEN X	MINUTES
			action :	the switchs smooth sluggish.	h and chec and that t	k that the	e lever			
e e										
FUNCTIO	NAL CHECK	(S						N	MEN X	MINUTES
GROUND	HANDLING	AND GRO	UND TEST	EQUIPMEN	т					
SPECIAL	TOOLS TO	REMOVE O	R SERVICE							
REMARK	5									
l'a										
ISSUE	1									
DATE	5 Dec 56									

741-3413-2-6

UNULASSIFI

## CF-105 SERVICE DATA

	_					
SYSTEM	SUB-SYSTEM		СОМРО		REF. NO.	
EIECTRICAL		CANOPIES	Car	opy Externa Switch	al Actuation	11-10-3
AVRO PART NO.		MANUFACTURER	MAN'F'R'S F	PART NO.	AIRCRAFT	EFFECTIVITY
CS-S-159-7					25	201
OVERHAUL LIFE:	KNOWN	1-	ESTIMAT	ED- 500	o hours	
FUNCTION	externa:	litate operating the lly. The switches co actuators.				
LOCATION		LH side of the front LH side of the rear of				
ACCESS					N	IEN X MINUTES
REPLACEMENT PRO	Mount th	ne switch on the cand secure the circuit w			M	EN X MINUTES




INSPECT	ION							MEN	X MINUTES
			Operate action i	ternally. the switch s smooth a luggish.	and chec	k that the	e lever d break		
FUNCTIO	NAL CHECK	(S						MEN	X MINUTES
GROUND	HANDLING	AND GRO	UND TEST	EQUIPMEN	т				
SPECIAL	TOOLS TO	REMOVE O	R SERVICE						
REMARK:	5								
			v						
ISSUE	1								
DATE	5 Dec 56								

SYSTEM		SUB-SYSTEM		COMPON	NENT	REF. NO.	
ELECTRICAL		CANOPIES		Latch Limit Sw	itches,	11-10-4	
AVRO PART NO. CS-S-152							
OVERHAUL LIFE:	KNOWI	N-	ES	TIMATED-			
FUNCTION	complet	rrupt the power supple the power supply to	ly to the	e canopy actuator copy seal valve w	and when		
LOCATION	latch 1	ckpit; on index plate			yy		
ACCESS				AA.	м	EN X MINUTES	
	Unobstr	ucted in the front ar	nd rear c	ockpits.			
REPLACEMENT PRO	CEDURE				М	EN X MINUTES	
	install with tw Connect	e actuator and switch on index plate aft co o mounting screws. wires. switch cover.		lever,			



INSPECTION				MEN )	MINUTES
	Check for securit connection. Check switch actu				
FUNCTIONAL CHECKS				MEN	K MINUTES
GROUND HANDLING AND GRO	UND TEST EQUIPMEN	т			
SPECIAL TOOLS TO REMOVE O	R SERVICE				
REMARKS					
ISSUE 1					
DATE 5 Dec 56					

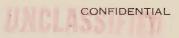

SYSTEM		SUB-SYSTEM		COMPON	NENT	REF, NO.
ELECTRICAL		CANOPIES		Interlock Relay Internal (2)	rs,	11-10-5
AVRO PART NO.		MANUFACTURER	MAN'F	'R'S PART NO.	AIRCRAFT	EFFECTIVITY
CSR-122					2520	1
OVERHAUL LIFE:	KNOW	N-	ES	TIMATED- 500	hours	
FUNCTION						
	To prev	ent the internal and as operating the cano	external py actuat	canopy actuation or in opposition	on i.	
LOCATION	E6 rela	y panel on roof of n	ose wheel	well.		
ACCESS					м	EN X MINUTES
	Unobstr	ructed when cover of h	E6 is rem	oved.		
REPLACEMENT PRO	CEDURE				М	EN X MINUTES
	Fit and	relay in E6 using four secure circuit conne cover of E6 - 4 quick	ections.			



INSPECT	ON						MEN	X MINUTES
		Check cir	rcuit con	nections f	or securit	<b>A.</b>		
FUNCTIO	NAL CHECKS						MEN	X MINUTES
GROUND	HANDLING AND GROU	ND TEST I	EQUIPMEN	Т				
SPECIAL	TOOLS TO REMOVE OR	SERVICE						
REMARKS								
ISSUE	1							
DATE	5 Dec 56							

SYSTEM		SUB-SYSTEM		COMPON	NENT		REF. NO.	
ELECTRICAL		CAMOPIES		Interlock Relay External (2)	7s,		11-10-6	
AVRO PART NO.		MANUFACTURER	MAN'F	'R'S PART NO.	AIRCRA	AFT EFFECTIVITY		
CSR-122			*			25201		
OVERHAUL LIFE:	KNÓWN	<b>V</b> -	ES	TIMATED- 500 h	nours			
FUNCTION								
To sv	o prev witche	ent the external and s operating the cano	internal	l canopy actuation or in opposition	on 1.			
LOCATION								
E	3 in n	osewheel well, RH sid	de.					
ACCESS						MEN	X MINUTES	
Ur	nobstr	ucted when cover of I	E3 is rem	noved.				
REPLACEMENT PROCE	DURE					MEN	X MINUTES	
Fi	it and	elay in E3 using four secure circuit conne	ections.					
Re	efit c	over of E3 - 4 quick	fastener	'S.				
							-	



INSPECTI	ON							ME	N X	MINUTES
			Check ci	rcuit conr	nections for	or securit	y <b>.</b>			
								*		
FUNCTIO	NAL CHECK	s						МЕ	N X	MINUTES
GROUND	HANDLING	AND GRO	UND TEST	EQUIPMEN	Т					
										76
									_	
SPECIAL	TOOLS TO	REMOVE O	R SERVICE							
										÷
REMARKS										<u> </u>
REMARKS										7.0
ISSUE	1								_	
DATE	5 Dec 56									

SYSTEM		SUB-SYSTEM		СОМРС	NENT	REF. NO.
EIECTRICAL		CANOPIES		Front Canop	r Actuator	11-10-7
AVRO PART NO.		MANUFACTURER	MAN'F	'R'S PART NO.	AIRCRAFT E	FFECTIVITY
7-1152-9	Win	nett-Boyd Airborne Accessories	Ele	600 N48-1	2520]	L
OVERHAUL LIFE:	KNÓWN	<b>\_</b>	ES	TIMATED-	500 hours	
FUNCTION	To open	and close the front	canopy.			v
LOCATION	Front c	ockpit - between the seat bulkhead.	base of	the canopy		
ACCESS					ME	EN X MINUTES
	Unobstr	ucted when the front	cano py	s open.	×	
REPLACEMENT PRO	CEDURE				МЕ	EN X MINUTES
	Refit no bulkhea	pip-pin holding actuated and bolt securing d. secure electrical of	actuator	to seat		
1-3413-7-5						

CONFIDENTIAL

INSPECTI	ION							MEN	X MINUTES
			Check th	ctuator for nat the el r and prop	ectrical c	onnector i	.s		
FUNCTIO	NAL CHECK	<s< td=""><td></td><td></td><td></td><td></td><td></td><td>MEN</td><td>X MINUTES</td></s<>						MEN	X MINUTES
GROUND	HANDLING	AND GRO	UND TEST	EQUIPMEN	Т				
SPECIAL	TOOLS TO	REMOVE O	R SERVICE						
REMARKS	5								
ISSUE	1								
DATE	5 Dec 56								

SYSTEM		SUB-SYSTEM		COMPON		REF. NO.
ELECTRICAL		CANOPIES		Rear Canopy A	lctuator	11-10-8
AVRO PART NO. 7-1152-9	Win	MANUFACTURER nett-Boyd Airborne Accessories		'R'S PART NO. 000 N48-1	AIRCRAFT E	
OVERHAUL LIFE:	KNOWN	<b>1</b> –	ES	TIMATED- 500	) hours	
FUNCTION	To open	and close the rear (	canopy.			
LOCATION	_					1 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7
	Rear co and the	ckpit - between the k seat bulkhead.	base of t	he canopy		
ACCESS					МІ	EN X MINUTE
SERVACEMENT. PRO	OCCUPIED IN THE PROPERTY OF TH					EN X MINUTE
REPLACEMENT PRO	Insert Refit n	pip-pin holding actus ut and bolt securing d. secure electrical co	actuator	to seat	MI	EN A MINUTE

METASSIFIED	
INSPECTION	MEN X MINUTES
Check that the actuator is securely mounted.  Check that the electrical connector is securely and properly fitted.	
FUNCTIONAL CHECKS	MEN X MINUTES
GROUND HANDLING AND GROUND TEST EQUIPMENT	
SPECIAL TOOLS TO REMOVE OR SERVICE	
REMARKS	
ISSUE 1	
DATE 5 Dec 56	

SYSTEM ELECTRICAL  AVRO PART NO.		SUB-SYSTEM CANOPIES		COMPO	NENT	REF. NO.
		CANOPIES				
AVRO PART NO	LECTRICAL CANOPIES			Canopy Seal	Valve	11-10-9
71110 171111 110.		MANUFACTURER	MAN'F'I	R'S PART NO.	AIRCRAFT	EFFECTIVITY
7-1852-14		Surface Combustion	3	0098	252	201
OVERHAUL LIFE:	KNÓWI	N-	EST	IMATED- 50	O hours	
FUNCTION	Permits	s entry of air pressu	re to inf	late the canopy	seal.	
LOCATION	Rear co	ockpit bulkhead.				
ACCESS	202				M	IEN X MINUTES
	Remove of the	panel on underside o rear cockpit bulkhea	f the fus	elage aft		
REPLACEMENT PRO	CEDURE				м	IEN X MINUTES
	Fit and	ive to structure - 4 is secure connector. access panel - 76 x 3				

CONFIDENTIAL

INSPECTI	ON							MEN X	MINUTES
			Check to	nat the co	nnector is	securely	and		
FUNCTIO		40							
FUNCTIO	NAL CHEC	(S						MEN X	MINUTES
GROUND	HANDLING	AND GRO	UND TEST	EQUIPMEN	Т				
SPECIAL	TOOLS TO	REMOVE O	R SERVICE						
REMARKS	5								
ISSUE	1								
DATE	5 Dec 56								