

Instructions for mounting the LOOK Junior Cable Assembly

1° — Select a cable length convenient to the size of the boot. The cable assemblies are delivered with 3 lengths of cable :

Short (30-1/2")

Regular (31-3/4")

Long (32-1/2")

2° — Fix the front side hitch on each side of the ski. The rear screw of the front hitch should be set directly under the widest part of the boot sole under the ball of the foot. Next, mount the rear side hitch with the rear screws 2-3/16" from the rear end of the boot sole.

3° — Turn the knurled nut located at the rear part of the lever until there is one-half inch between the knurled nut and the cable hook. Insert the cable into the 4 side hitches on the ski and into the front throw hook. Open the lever to a vertical position. Before drilling, check the distance between the front throw hook and the forward part of the toe unit. It must be at least 2-3/4" to allow proper clearance when the lever opens. With the cable drawn snugly around the heel of the boot, drill and mount the four screws of the lever base plate.

ADJUSTMENT OF THE LEVER

1° — With the lever closed and the cable without tension, check that the two vertical edges of the U piece of the lever are half way between the marks « mini » and « maxi ». Otherwise turn the knurled nut located on the front of the lever.

2° — Put the boot in place and adjust the cable length (lever opened) by turning the knurled nut located at the rear part of the lever, in order to have the vertical edges of the U piece near the mark « mini » when the lever is closed and the cable tight on the boot.

SAFETY ADJUSTMENT

1° — Working

The release action is made by the vertical edges of the U piece, the lever coming back against the ends of the releasing shaft.

2° — Adjustment

All the following adjustments are to be made with the boot out of the cable and the lever closed.

First mount the lever for average strength of release, i.e. the vertical edges of the U piece in the middle between the marks « maxi » and « mini ».

Test the safety system :

If the release is too easy for the skier, screw slightly the knurled nut located at the forward end of the lever, in order to bring the vertical edges near the mark « maxi ».

On the contrary, if the skier cannot release, reduce the strength of opening, by unscrewing the knurled nut, in order to bring the vertical edges near the mark « mini ».

Note : The two knurled nuts can be turned easily by hand, without a key.

Caution :

Check after several releases that the vertical edges of the U piece are still near the mark « mini », the cable being tight on the boot and the lever closed.

If not, adjust again by turning the knurled nut located at the rear part of the lever.