

CONTENTS

SAFETY REMINDERS	1	QUARTER FOLDER	14-16
INTRODUCTION	2-5	Engaging the Quarter Folder	14
OPERATING CONTROLS	6-8	Disengaging the Quarter Folder	14
HALF-PAGE FOLDER	6	Half-Fold Jaw Cylinder Release Cam	14-15
R-T-F Trolley Throwoff Lever	6	Centering the Quarter Fold	16
R-T-F Trolley Adjusting Screw	6	Positioning and Setting the	
Nipping Roller Handwheels	6	Quarter-Fold Trolleys	16
Upper R-T-F Drive Clutch	6	Positioning and Setting the	
Folder Drive Clutch	6	Quarter-Fold Nipping Pulleys	16
Delivery Height Adjusting Handwheel	6	Adjusting the Quarter-Fold Stops	16
Delivery Height Adjusting Lever	6	Adjusting the Quarter-Fold	
Half-Fold Stripper Shoe Lever	6	Folding Rollers	16
Speed Indicator	6	Setting the Quarter-Fold Kicker	16
Counter	6	PARALLEL FOLD	16-19
Electrical Counter and Switch	6	Engaging the Parallel-Fold	
QUARTER FOLDER	7	Jaw Cylinder	16
Quarter-Fold Trolley Handwheels	7	Disengaging the Parallel-Fold	
Quarter-Fold Stripper Shoe Lever	7	Jaw Cylinder	16-17
Quarter-Fold Nipping Pulley Handwheels	7	Installing the Parallel-Fold Tucker	
Quarter-Fold Stop Adjusting Handwheels	7	Blades in the Half-Fold Jaw Cylinder	17
Quarter-Fold Folding Roller Handwheels	7	Positioning the Half-Fold Stripper	
Quarter-Fold Centering Screw	7	Shoes to the Parallel-Fold Position	17
Quarter-Fold Jam Switch	7	Removing the Parallel-Fold Pan Shoe	17
PUSHBUTTON STATIONS	7	Installing the Parallel-Fold Pan Shoe	17
TIMING MARKS	7-8	Changing the Lap on a	
PREPARING TO RUN	9	Parallel-Folded Product	19
INSTRUCTIONS FOR SETTING AND		Adjusting the Parallel-Fold Combing	
ADJUSTMENT	10-19	Blade Arrangement	19
FOLDER DRIVE CLUTCH	10	MAINTENANCE	20-28
UPPER FORMER DRIVE	10	REPLACING AN R-T-F TROLLEY TIRE	20
R-T-F TROLLEYS	11	REPLACING AN R-T-F PERFORATOR	
Positioning a Trolley	11	OR SLITTER KNIFE	20
Setting Trolley Pressure	11	SETTING THE FORMER	20
INSTALLING THE SLITTER KNIFE		SETTING THE ROLLERS-POINT-OF-FORMER ..	20
OR R-T-F PERFORATOR	11	REPLACING THE NIPPING ROLLER	
NIPPING ROLLERS	11	PERFORATOR KNIFE	21
Setting the Upper Nipping Rollers		REPLACING CUTTING CYLINDER PINS	21
for Web Width	11	REPLACING CUTTING KNIVES	
Setting the Lower Nipping Rollers	11	AND CUSHIONS	21-22
Adjusting Nipping Rollers for		REPLACING A CUTTING RUBBER	22
Number of Webs	12	REPLACING A QUARTER-FOLD	
NIPPING ROLLER PERFORATOR		TROLLEY TIRE	22
ARRANGEMENT	12	REPLACING A QUARTER-FOLD NIPPING	
CROSS PERFORATOR	12	PULLEY TIRE	23
Installing the Perforator Knife	12	CROSS PERFORATOR MARGIN RINGS	23
Adjusting the Position		DRIVE BELTS	23-25
of the Perforation	12	CAM FOLLOWERS	25-26
Adjusting the Penetration of		SETTING THE HALF-FOLD	
the Perforator Knife	12-13	TUCKER BLADE	26-27
FOLDING COUPLE	13	SETTING THE PARALLEL-FOLD	
Changing From Even Fold to 9/32"		TUCKER BLADE	27-28
(7.1 mm) Lap Fold (Pin Side Long)	13	LUBRICATION	29-32
Changing From a 9/32" (7.1 mm)		TROUBLESHOOTING CHECK LIST	33
Lap Fold to an Even Half Fold	13	PARTS CATALOG	34-42
FOLDER DELIVERY	14		