

OPERATION AND MAINTENANCE



SWAN CYGNET MODEL 270B

 **SWAN**
ELECTRONICS
Irvine, California
A Subsidiary of Color Corporation

OPERATION AND MAINTENANCE SWAN CYGNET MODEL 270B



INTRODUCTION

The Swan Cygnet Model 270B Single Sideband Transceiver is designed to be used in either CW or SSB mode on all portions of the 80-, 40-, 20-, 15-, and 10-meter amateur radio bands.

Power input on all bands exceeds 200 watts, PEP, on single sideband and 150 watts on CW. The Model 270B includes automatic gain control, (AGC), automatic level control, (ALC), and grid block keying.

The basic transceiver provides coverage of all portions of the 80 through 10-meter amateur bands. In addition to this, the amplifier circuit will tune to most MARS frequencies near the 80-, 40-, and 20-meter bands. By using the Model 210X crystal oscillator *adapter*, MARS operation is then possible.

The internal AC power supply permits fixed station or portable operation whenever 117 volts 50-60 cycles is available. Export models for 220-240 volts are available on special order.

For 12-14 volt DC operation in mobile, marine or portable applications, a DC converter unit, model 34-A is available. It attaches to the back of the 270B in place of the AC power cord connector. Its dimensions are only 1 1/2 X 3 X 4 in.

The Model 270B generates a single sideband signal by means of a crystal lattice filter, and the transceive operation automatically tunes the transceiver to the received frequency. Provisions are included in the transceiver for operation on either upper or lower sideband.

Wide diversity of the single conversion design, has been proven in several thousand of the popular Swan transceivers. Mechanical, electrical, and thermal stability is exceptionally high. All oscillators are temperature compensated and voltage regulated. Push-to-talk operation is standard, with provision for plugging in the Model VN-2 accessory Vot unit for automatic voice control.

SPECIFICATIONS

FREQUENCY RANGES

80 Meters	3.5 to 4 mc.
40 Meters	7.0 to 7.300 mc.
30 Meters	10.0 to 14.350 mc.
15 Meters	21.0 to 21.450 mc.
10 Meters	28.0 to 29.7 mc.

POWER INPUT

Single Sideband, Suppressed Carrier:
260 watts, PEP, minimum on all bands.
CW: 180 watts, dc input on all bands.
AM: (Single Sideband with Carrier)
65 watts dc input on all bands.

DISTORTION

Distortion products down approx. 30 db.

UNWANTED SIDEBAND SUPPRESSION

Unwanted sideband down more than 40 db.

CARRIER SUPPRESSION

Carrier suppression greater than 30 db.

SELECTIVITY provided by 5500 Kc crystal lattice filter, 3700-cycles wide at 6 db down, 4600 cycles wide at 60 db down, shape factor of 1.7 with ultimate rejection greater than 100 db.

RECEIVER SENSITIVITY

Less than 0.5 microvolt at 50 ohms impedance for signal-plus-noise to noise ratio of 10 db.

AUDIO OUTPUT AND RESPONSE

Audio output, 1 watt to 3.2 ohm load. Response essentially flat from 300 to 3000 cps in both receive and transmit.

TRANSMITTER OUTPUT

Wide-range R-network output matches resistive loads from 50 to 75 ohms.

METERING

Power amplifier cathode current 0-400 ma on transmit, 5-Meter 0-30 dc over 50 on receive.

FRONT PANEL CONTROLS

AF Gain, RF Gain, Sideband Selector, CAL-RBT-TUNE/CW, Mic. Gain, Bandwidth, Carrier Balance, PA Mode Tune, Driver Tune, PA Load, Dist. Sel, Meter Switch.

REAR PANEL CONTROLS AND CONNECTIONS

Hot point/monitor, CW key jack, Jones plug power connector, Antenna Jack, 5-Meter zero, Auxiliary relay switching, Onboard VFO connector, Headphone Jack, The Vox Connector is located on the side of the chassis.

VACUUM TUBE COMPLEMENT

V1	12AU6 VFO Amplifier
V2	12BE6 Transmitter Mixer
V3	6AR5 Driver
V4	6JQ6 Power Amplifier
V5	6AR5 Receiver RF Amplifier
V6	12BH6 Receiver Mixer
V7	12BA6 First IF Amplifier
V8	12BA6 Second IF Amplifier
V9	12AX7 Product Detector/Receive Audio
V10	6AV6 AGC Amplifier/Rectifier
V11	6AQ5 AF Output
V12	12BA6 100 KC Calibrator
V13	6JH6 Balanced Modulator
V14	12AX7 Microphone Amplifier

TRANSISTOR COMPLEMENT

Q1	2N706 Oscillator
Q2	2N5190 Buffer
Q3	2N706 Carrier Oscillator

POWER REQUIREMENTS

117 Vac., 60 cps, at 4 amps.
(230-220-240 volt, 50-60 cps, at 2.5 amps max., export model)

12-14 volts DC operation with model 14-A converter unit plugged into back of 210B. Current drain: 8 amps, receive mode; 12 amps average with voice modulation; 25 amps maximum in TUNE mode. (See Fig. 5, page 9)

DIMENSIONS

Height	5 1/2 in.
Width	12 in.
Depth	11 in.

WEIGHT

Weight	34 lbs.
--------	---------

GENERAL DISCUSSION

The Swan 270B transmitter provides single sideband, suppressed carrier transceiver operation, and generates the single sideband signal by means of a crystal lattice filter. To permit a logical discussion of this mode of operation certain definitions are necessary. In a normal AM signal, (double sideband with carrier), a radio frequency signal is modulated with an audio frequency signal. This is considered by many to be merely a case of varying the amplitude of the carrier at an audio rate. In fact, however, there are actually sideband frequencies generated, which are the results of mixing the RF and the AF signals. These sidebands are the sum of, and the difference between the two heterodyned signals. In the detection of this conventional AM signal, the two sidebands are relied with the carrier to recover and reproduce the audio intelligence. This is an inefficient means of transmission, because only 25 percent of the transmitted power is used to transmit intelligence. There are other attendant drawbacks, also. The bandwidth of AM voice transmission is approximately 6 kc, while the actual demodulated audio is only approximately 3 kc. The result is inefficient use of the frequency band, and over half of the allocated band is unusable due to heterodynes, interference, and congestion.

In the single sideband, suppressed carrier mode of transmission, only one of the sideband signals is transmitted. The other sideband and the carrier are suppressed to negligible level. In addition to increasing the transmission efficiency by a factor of four, single sideband effectively doubles the number of stations or channels which can be used in a given band of frequencies.

It should be remembered that in the single sideband, suppressed carrier mode of transmitting, the unwanted sideband and carrier are only suppressed, not actively eliminated. Thus, with a transmitted signal from a transmitter with 30 db sideband suppression, the other or unwanted sideband will be present, and will be transmitted, but its level will be 30 db below the wanted sideband. When this signal is received at a level of 20 db over SN, the unwanted sideband will be present at a level of approximately 35. The same is true of carrier suppression. With carrier suppression of 60 db, and a signal level of 20 db over SN, carrier will be present at a level of approximately 50 to 54.

For the following discussion refer to the schematic diagrams, and to Figures 1, 2, and 3.

SIGNAL GENERATION

When the push-to-talk switch at the microphone is pressed, the transmitter portion of the transceiver is initiated, and it generates a single sideband, suppressed carrier signal in the following manner. Current is gener-

ated by Q1 Carrier Oscillator, which is a Pierce oscillator with the crystal operating in parallel resonance. This stage operates in both the transmit and receive modes. When transmitting, the RF output of the oscillator is injected into the control grid of the Balanced Modulator, V13. This balanced modulator is a beam deflection tube, and operates similar to a cathode ray tube in that the electron beam from the cathode is deflected to one output plate or the other by the charge appearing on the deflection plates. The carrier signal fed to the control grid of the balanced modulator appears on both plates of the output. The two plates are connected to transformer T1301 in push-pull, so the carrier signal cancels itself out in T1301. The deflection plate dc voltages are adjusted by means of the carrier balance control so that the RF being fed to the output plates will cancel out, and the output from T1301 will be zero. Audio signals from the Microphone Amplifier, V14, are applied as a modulating voltage to one deflection plate, and the two sidebands resulting from the sum and difference frequencies of the audio and carrier signals appear in the output of transformer T1301. Carrier suppression is approximately 60 db.

The double sideband, suppressed carrier signal is then coupled from the secondary winding of T1301 to the crystal filter, which suppresses the lower sideband, and passed to only the upper sideband to be fed to the First IF Amplifier V1. This carrier frequency is generated at approximately 5500.0 kc, normal sideband. With the opposite sideband crystal, the carrier crystal frequency will be 5503.3 kc, and this positions the double sideband signal on the other side of the filter response curve, attenuating the upper sideband by at least 30 db. In the single conversion mixing process, these sidebands become inverted on 80 and 40 meters. Thus the Swan 270B normally operates on lower sideband on 80 and 40, while on 30, 15, and 10 meters normal operation is on upper sideband.

Q1, the VFO (N706 Oscillator), operates in the common base configuration as a Colpitts oscillator. Q2, the buffer is used for isolation. The extremely good regulation achieved through using the Zener diode regulator (D1711) across the bias supply voltage, also contributes to the stability.

Band-switching is accomplished by changing the tank circuit coil. The VFO in the Model 270B exhibits extremely good stability after the initial warm-up period. With down-circuit start will be less than 1 kc for the first hour on 80, 40, and 15-meter bands, and less than 2 kc on 10 and 15 meters. After the initial warm-up period, drift will be negligible.

The single sideband, suppressed carrier signal from the First IF Amplifier is fed to the Transmitter Mixer, V2,

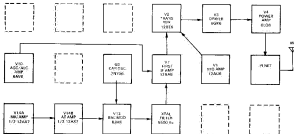


FIGURE 1. BLOCK DIAGRAM, TRANSMIT MODE

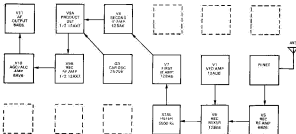


FIGURE 2. SUPERMAGRAM, NEGATIVE MODE

CIRCUIT THEORY (Cont.)

where it is heterodyned with the VFO signal. The resultant signal at the desired transmit frequency is amplified by the Driver, V3, and the Power Amplifier, V4. The signal from the VFO Amplifier is injected in the transistorized VFO/Buffer circuit Q1 and Q2. The signal from the VFO is mixed to the VFO Amplifier, and on 40 and 80 meters, is subtractively mixed with the single sideband signal from the IF Amplifier, to result in USB operation. On 20, 15, and 10 meters, the frequencies are additively mixed, resulting in output on the upper sideband.

When in TRANSMIT, the gain of the First IF Amplifier is controlled through the Automatic Level Control network (using the AGC Amplifier V10) in control the gain of the stage is (response to the average input power to the Power Amplifier. This AGC system will compensate for any extremely strong input signals, but does not completely eliminate the necessity of proper adjustment of the Mic. Gain Control. This feature will help prevent the transmitter from flat-topping and spurious emissions, but considerable distortion may occur if the Mic. Gain Control is not properly adjusted. Refer to Operating Instructions.

TUNE AND CW OPERATION

Normally, the frequency of the carrier oscillator is approximately 300 cps outside the 60% passband of the crystal lattice filter. In TUNE position, the frequency of the carrier oscillator is moved approximately 800 cps to place it well within the passband of the crystal lattice filter. A similar procedure is followed for CW to allow full carrier output during CW operation.

RECEIVE

In RECEIVE position, or at any time when the transmitter is not in TRANSMIT, all circuits used in transmitting are disabled through the relay controlled circuits, R1. The relay is energized for transmitting and de-energized for receiving. One contact, when de-energized, allows signals from the transmitting tank circuit and antenna to be fed to the Receiver IF Amplifier, V5, where they are amplified and filtered in the control grid of the Receiver Mixer, V6. The local oscillator signal from the VFO Amplifier is now used to heterodyne the received signal to the IF frequency. All IF amplification is accomplished at this frequency, nominally (3500 kc), through V7 and V8 IF amplifiers. In the Product Detector V9A, the IF signal is heterodyned with the carrier frequency generated by Carrier Oscillator, Q3. The resultant audio is then amplified by V9B, which then couples to V10, the AGC amplifier, and V11, the output audio stage.

FREQUENCY CALIBRATION

Frequency calibration of the Model 220B is in 5 kc increments on 80-, 40-, 20-, and 15-meters, and in 20-kc increments on 10-meters. Dial accuracy and tracking are

very good as the 220B, but constant must always be observed when operating near band edges. Measuring the frequency with the 100 kc calibrator when working near band edges is recommended.

DIAL SET

A dial-set control has been provided so that dial adjustment can be made at any 100 kc point on the dial. With calibrator on, set the dial to any 100 kc point closest to the frequency you wish to work. Now adjust dial-set control to zero-beat the VFO with the 100 kc Calibrator. This provides greater accuracy of dial readout.

CAUTION

Care must be exercised when tuning for the 100 kc harmonics of the calibrator. Several spurious image signals may be heard, although they will be definitely weaker than the correct harmonics.

TRANSMIT AND RECEIVE SWITCHING

Transmit and receive switching is performed by relay Q1. In TRANSMIT position, only those tubes that operate in the transmit mode are operative, all others being biased to cutoff through the relay contacts. In the RECEIVE position, with the relays de-energized, the tubes that are used only in transmit are cut off in the same manner. Relay K1 when de-energized, feeds signals from the output pi-network to the receiver, and is used also to control several switching diodes. In transmit position the meter indicates the cathode current of the power amplifier. In receive position, it indicates the voltage across R700 in the screen grid of the first IF Amplifier, V7, which is directly proportional to the AGC voltage used to control the gain of the tube. Thus, the meter indicates the relative strength of received signals.

POWER RATING

The Swan 220B is capable of 150 watts, PEP input under steady state two-tone test conditions. The peak envelope power, when voice modulated, is considerably greater, typically 300 watts or more.

The full-time power supply produces a no-load plate voltage of approximately 600 volts. Under TUNE conditions, or CW operation, this voltage will drop to approximately 500 volts. Under steady state two-tone modulation, the voltage will drop to approximately 310 volts. If the power amplifier idling current is 15 ma, and the two-tone current, just before flat-topping, is 300 ma, the peak two-tone current will be 300 ma. Under these conditions the PEP input will be 310 volts times 300 ma

310 watts. Under voice modulation, because average power is considerably less, the power amplifier plate and screen voltages will be maintained higher, even during voice peaks, by the power supply filter capacitors. Peak

plate current will therefore also be higher than with various test conditions. Under typical operating conditions, peak plate current before tripping will be 350 mA at 300 volts, to result in an input of 300 watts. PEP Readings of cathode current will not reflect this power input, however, because of the clamping in the cathode current meter, cathode current readings under normal voice level should not exceed more than 100 to 120 mA.

PROPOSED AND TESTED PLATE DISPOSITIONS

There is often a misunderstanding about the plate dissipation of tubes operated as A.M. amplifiers under voice modulation. In the Swan 270B, while in the transmit position, and with no modulation, the plate voltage will be approximately 130 volts, the plate current 50 ma, and the power loss will be 25 watts.

Amplifiers agree that the average video power is 30 to 50 dB below peak video power. Normally, some peak clipping in the power amplifier can be tolerated, and a peak-to-average ratio of only 6 dB may sometimes occur. Under such conditions, the average power output will be 80 watts, and average plate current will be 100 ma. With power amplifier efficiency of 65 percent plate dissipation will be approximately 26 watts. The FLOP is rated at 30 watts, continuous duty cycle, in normal TV service. Thus it can be seen that under normal operating conditions, the power amplifier tube in the Sween 2094 is not being driven very hard. Now, however, that proper modulation level must be maintained by correct setting of Mic Gain, and that the length of time in TUNE position must be 30/300 to five times that 30 sec. at a time.




FIGURE 3. CRYSTAL FILTER CHARACTERISTICS

INSTALLATION

GENERAL

The installation of the Swan Cygnet is not at all difficult and it involves only the placement of the transceiver in its operational area (fixed or mobile), connection of power (either 117 volts ac, or 12 volts dc), and the connection of an antenna. The following paragraphs are therefore devoted to the installation requirements involving microphones, fixed and mobile operation, and recommended antenna types. Before actual installation, be sure to check for possible shipment damage. Remove the cabinet, (three screws on each side), and check to make sure that all tubes are firmly in place.

FIXED INSTALLATION

Locate the Cygnet in an area which is well ventilated and which provides complete operational freedom of the front panel controls. Connect the ac power cord to the 12 pin Jones connector on the back. If the Cygnet is a 117 volt model, plug the power cord into a standard 117 volt, 60-60 cycle outlet having a capacity of at least 10 amps. If the Cygnet is an Export model, it should first be set to the proper voltage (up: 208, 220, or 240 volts, 50-60 cycles). Remove the cabinet, and locate the terminal strip near the top of the power transformer. There are 3 terminal lugs, and a decal indicates the voltage tap for each. Connections have been made in the 220 volt tap at the factory. If your supply voltage is 208 or 240, undo the red colored wire and move it accordingly.

Connect an antenna to the Cygnet which is suitable for the band which is to be used.

FIXED ANTENNAS

A standard PL259 coax connector plug will fit the Cygnet's antenna jack, and 50 or 75 ohm coax cable to the antenna is recommended. RG58 or RG59 is satisfactory for runs up to 30 feet. For longer runs the larger RG8 or RG11 produces less line loss, particularly on 30 meters.

Any of the common antenna systems designed for use on the amateur high frequency bands will work well with the Cygnet. However, the amateur should consider an antenna system which best fits his operational requirements. For example, a rotatable beam antenna is usually best suited on the 30, 15 and 40 meter bands for DX operation, and an inverted "V" or a similar antenna is usually best suited for 80 and 40 meters. Methods for constructing antennas and antenna towers are described in detail in the ARRL Antenna Handbook and similar

publications. It is recommended that these publications be consulted during the design of any antenna system.

MOBILE INSTALLATION

Many different methods of mobile installation are possible, and it is expected that hams will find methods which are best suited for their installation requirements. Swan Electronics has available a Mobile Mounting Kit which is suitable for under-the-dash installations. Figure 4 shows the recommended mounting methods using this kit.

DC CONVERTER, MODEL 14A

For 12-14 volt DC operation in mobile installations, it will be necessary to use the 14-A converter, which plugs directly into the back of the 230B in place of the AC power connector. This accessory is available from your Swan dealer. Refer to installation instructions supplied with the 14-A converter.

MOBILE ANTENNAS

Mobile antenna installations are quite critical since the antenna represents a number of compromises when used on the high frequency bands. Many amateurs lose the efficiency of their mobile antennas through improper tuning. Points to remember about the mobile antenna are:

1. The "Q" of the antenna loading coil should be as high as possible. There are several commercial models available which use high "Q" coils, including the Swan Models 25, 45 and 55 mobile antennas. (Contact your Swan distributor or Swan Electronics for details.)
2. The loading coil must be capable of handling the power of the Model 270 without over heating. In TUNE position, the power output of the transceiver may exceed 150 watts. Wide spaced, heavy wire loading coils are essential.
3. The SWR bridge is a useful instrument, but unfortunately it is quite often misunderstood and over rated in importance. Basically, the SWR bridge will indicate how closely the antenna load impedance matches the transmission line. With long transmission lines, such as will be used in many fixed station installations, it is desirable to keep the impedance match fairly close in order to limit power loss. This is

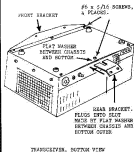
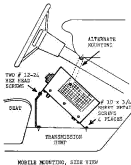
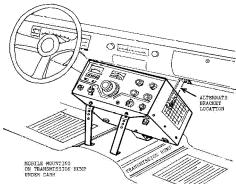


FIGURE 4. MOBILE INSTALLATION MOUNTING DETAILS

particularly true at the higher frequencies. The longer the line, and the higher the frequency, the more important SWR becomes. However, in mobile installation, the transmission line seldom exceeds 20 feet in length, and an SWR of even 4 to 1 adds very little to power loss. The only time SWR will indicate a line fault is when the antenna presents a load close to 50 ohms, but many mobile antennas will have a base impedance as low as 15 to 20 ohms at their resonant frequency. In such a case, SWR will indicate 3 or 4 to 1, and yet the system will be radiating efficiently.

4. The really important factor in your mobile system is that it should be carefully tuned to resonance at the desired frequency. The fallacy in using an SWR bridge lies in the fact that it is sometimes possible to reduce the SWR, resulting by detuning the antenna. Field strength may actually be reduced in an effort to bring SWR down. Since field strength is the primary goal, we recommend a Field Strength Meter for antenna tuning.

5. For antenna adjustments, the Swan 270B may be loaded lightly to about 10% duty, cathode current included, the usual 200-400 ms. This will limit tube dissipation during adjustments, and will also help reduce interference on the frequency. In any case, do not leave the transmitter on for very long at one time. Turn it on just long enough to tune and load, and get a field strength reading.

Start out with the antenna whip at about the 2000-2400 adjustment range. Set the VFO to the desired operating

frequency and then adjust P. A. TUNE for dip, and P. A. LOAD for 100 ms. Then observe the field strength reading. The Field Strength Meter may be set on top of the dash, on the hood, or at an elevated location some distance from the car.

Change the whip length a half inch, or so, at a time, retune the P. A. for 100 ms, loading each time, and check field strength. Continue this procedure until the point of maximum field strength is found. This adjustment will be most difficult on 75 meters, somewhat less critical on 80, until on 10 meters the adjustment will be quite facile. After tuning the antenna to resonance, load the P. A. to full power.

MICROPHONE

The microphone input is designed for high impedance microphones only. The choice of microphone is important for good speech quality, and should be given serious consideration. The crystal filter filter in the transmitter provides all the restriction necessary on audio response, and further restriction in the microphone is not required. It is more important to have a microphone with a smooth, flat response throughout the speech range. The microphone plug must be a standard 1/2 inch diameter three contact type. The tip connection is for push-to-talk relay control, the ring connector is the microphone terminal, and the sleeve is the common chassis ground. The microphone manufacturer's instructions should be followed in connecting the microphone cable to the plug. Either a hand-held or desk type microphone with push-to-talk control will provide a suitable installation.




FIG. 5. SWAN CYCART MODEL 270B REAR VIEW

CONTROL FUNCTIONS

On-Off Switch (On RF Gain Knob)

Turns power supply on and off.

Cal-Rec-Tune/CW

Calibrate

All voltages are applied to receiver. Grounds cathode of V12.

Reverse

All voltages are applied to receiver.

Tune/CW

Transmitting circuits are energized. C1261 is disconnected from ground shifting carrier frequency into filter passband. Carrier is fully inverted. P.A. cathode control is switched in, reducing input power.

Mix. Gain

Controls potentiometer R1484 in the grid of V14A and controls amount of audio to the balanced modulator.

Car. Balance

Controls potentiometer R1408 in the balanced modulator deflection plate circuit, and (when) nulling out the carrier.

RF Gain

Controls variable resistor R505, common in the grids of Receiver Mixer V6, RF Amplifier, V7 and V8 RF Amplifiers.

AF Gain

Controls potentiometer R1401 in grid circuit of V11 AF Output, and controls audio volume.

Main Tuning

Controls C1612 in frequency determining tank circuit of VFO.

Driver

Controls C1A and C1B in plate tanks of transmitter output and driver.

PA Tune

Controls C408 in pi-network to tune final power amplifier plate to resonance.

PA Load

Controls C411 in pi-network to match impedance of output load. Turns input to Receiver RF Amplifier.

Main Handsetish

Switches tank coil and associated capacitors in VFO, VFO Amplifier, Driver and Transistor Mixer.

Sideland Selector

Selects upper or lower sideland.

Meter Switch

Selects Sumator or P.A. cathode reading.

OPERATION

PRE-OPERATION ADJUSTMENTS

Before connecting any cables to the Swan 770B perform the following steps:

1. Rotate the PA BIAS control on the rear chassis (clock fully counter clockwise).
2. Rotate the CAL-REC-TUNE-CW to REC.
3. Rotate the RF Gain Control counter clockwise to operate the power switch to OFF.

CONNECTIONS

1. Connect wire from switch ground to ground stud provided on rear of chassis. This is not essential, but is recommended.
2. Connect a 50 to 75 ohm antenna feed-line to the central connector on rear panel.
3. Connect the power supply cable to the James connector on the rear panel.
4. Connect the power supply cable to the proper voltage source.

WARNING

Discharges high voltage is present on the plate of the power amplifier whenever the power supply is energized.

RECEIVE OPERATION

1. Rotate the RF GAIN Control clockwise to about the 1 o'clock position. The power switch will operate applying voltage to the transmitter.
2. Wait approximately one minute to allow the tube filaments to reach operating temperature. During this period, perform the following steps:
 - a. Rotate BANDSWITCH to desired band.
 - b. Rotate MIX. GAIN fully counter-clockwise.
 - c. Rotate CAR. BAL. control to the mid-scale position.
 - d. Set PA TUNE control to mid-position.
 - e. Set DRIVER control to mid-position.
 - f. Set PA LOAD to mid-position.
 - g. Set tuning dial to desired operating frequency.
 - h. Set AF GAIN control to approximately 10 o'clock position.
3. Carefully adjust the DRIVER, and the PA TUNE controls for maximum receiver noise.

NOTE

The DRIVER control energizes the transmitter driver stages and the receiver RF amplifier plate circuit. The PA TUNE and PA LOAD controls adjust the input and output capacitors in the trans-

mitter power amplifier final plate circuit, as well as the receiver RF amplifier grid circuit. Proper adjustment of these controls is the relative position will reach its approximately resonant condition in the transmitter stages.

RECEIVER TUNING

Precise tuning of a single sideband signal is very important. Do not be satisfied to merely tune until the voice can be understood, but take the extra care of setting the dial to the exact spot where the voice sounds natural. Above all, avoid the habit of tuning so that the voice is pitched higher than normal. This is an unfortunate habit, practiced by quite a number of operators. The following points help to explain the effects of mistuning:

1. If you tune so the received voice is higher than normal pitch, you will then transmit off frequency, and your voice will sound lower than normal pitch to the other station. He will probably excuse his dial to make you sound right. If you keep this up, you'll gradually walk one another across the band. If both of you are mistuning to an unnatural higher pitch, you'll walk across the band twice as fast. (And someone will no doubt be accused of frequency drift.)

2. Mistuning results in various harmonic distortion on the voice, and should be quite noticeable to the average ear. Some will claim that if they don't know how the other person's voice actually sounds, they can't hear him properly, but this is not true. With a little practice, it will be fairly easy to tell. Some voices are relatively rich in harmonics, and are easier to tune in than a voice with a "flat" voice. Also, a transmitter, which is being operated properly with low distortion will be easier to tune in than one which is being over-driven and is generating excessive distortion. There is no mistaking when you hear a station tuned right on the mark, it will sound just like "A.M." as to speak. Mainly, avoid the habit of tuning so everyone sounds higher than normal pitch, or like Donald Duck. This is incorrect, unsensitry, and sounds terrible.

3. A variable control for receive frequency, sometimes referred to as "incremental tuning," is not available on the Swan 200B. Such a device is not necessary if proper tuning habits are exercised.

4. Your Swan 200B will automatically transmit on exactly the same frequency as the one to which you are listening. There is no adjustment for making one the same, when by using the same and tuner for both send and receive, it happens automatically. If operation of receive and transmit frequency control is desired, the Model 50B or 510C VFO unit may be used.

TRANSMITTER TUNING

Special Notice Read Carefully. Be sure that you understand and remember these notes when tuning the transmitter.

1. The most important detail to keep in mind when tuning the transmitter portion of your Swan 200B is that the P.A. TUNE control must be resonated as quickly as possible.
2. This is accomplished by adjusting the P.A. TUNE to minimum meter reading with function switch in TUNE mode. P.A. cathode current, as indicated by the meter will show a "dip" as P.A. TUNE is rotated through resonance. Stop at the "dip," or minimum reading.
3. The P.A. tube is dissipating all the power input when it is not in resonance, and can be permanently damaged in just a few seconds.
4. Once resonance has been established, the P.A. can operate at full power input for quite awhile, although we recommend 30 seconds as a safe maximum. But, it is most important to realize that the 30 second limit counts that the P.A. TUNE control has been immediately resonated. This rule applies generally to all transmitters.
5. Do not tune more often than necessary. You shouldn't have to retune every time changing bands or antennas. The P.A. tube will last for many months at even parts of normal operating, but excessive tuning will shorten tube life.

TRANSMITTER TUNING STEPS

1. (a) Sideband Selector in NORM. position. (b) Bandswitch and Tuning Dial to desired frequency. (c) MIC. GAIN at minimum. (d) CAR. BAL. at 11 o'clock. (e) Function Switch in REC. position. (f) Meter Switch in P.A. CATH. position. (g) MTC with press-to-talk switch plugged in MTC Jack.
2. Press the MTC Switch, and quickly rotate CAR. BAL. control for minimum meter reading. If the control has no effect at this time, do not be concerned. The P.A. (Power Amplifier) stage is not tuning, or "tipping," and there is no grid drive being applied. The meter is reading "idling" current, which should be about 40 ma. This point is indicated on the meter scale by a small triangular symbol. The permissible idling ranges is 30 to 50 ma. If the meter does not read within this range, adjust P.A. BIAS on back of the transmitter. This requires a screw driver, and should not be repeated often. If idling current tends to creep upward slightly with warm-up, set it at 50 ma. Excessive creep indicates that the P.A. tube is gassy, and may need to be replaced soon.
3. If this is the first time you are tuning the transmitter, set P.A. LOAD to 9 o'clock. After experience


In tuning, this control may be pre-set to the previously determined position.

Note: Tip is now the transmitter has been "dipping" and there has been no particular time limit involved. The following steps apply grid drive, and require caution. Observe the recommended 30 second time limit.

4. With the function switch still in REC., position again press the Mic. button and:
 - a. Set the CAR. BAL. control to 3 o'clock or 9 o'clock.
 - b. Rotate the DRIVER control for maximum meter reading.
 - c. Anomously rotate the P.A. TUNE control for minimum meter reading, or "dip." This is the critical "resonating" adjustment which must be done quickly to produce P.A. tube life!
 - d. Re-adjust CAR. BAL. for minimum meter reading.

5. Switch to TUNE position and observe meter reading. Begin advancing the P.A. LOAD control clockwise in small steps, each time "dipping" the P.A. TUNE control for minimum meter reading. As P.A. LOAD is turned further clockwise, the P.A. TUNE "dip" will become more shallow, until finally it may be difficult to see the dip.

The proper degree of loading is when the dip is about 10 per cent. down from the maximum off-resonance reading. In other words, if the meter reads 200 Ma. when P.A. TUNE is off resonance, it should dip to about 180 Ma. at resonance. Or, if the meter reads 250 Ma. off resonance, then adjust P.A. LOAD so that P.A. TUNE dips to 225 Ma. at resonance. Refer to chart below for additional clarification.



ILLUSTRATING PROPER P.A. LOAD ADJUSTMENT AS INDICATED BY "DIP" IN P.A. CATHODE CURRENT WHEN TURNING P.A. TUNE CONTROL THROUGH RESONANCE.

The specific meter reading is not vitally important, and may vary considerably, being less on 10 meters than on 80 meters. Also, tube condition and line voltage can affect the meter reading. It will normally read 200 Ma. or more when off resonance. With high line voltage and new tubes it may be as high as 250 Ma. Remember, the P.A. should never be held out of resonance for more than a second or two, just long enough to observe the meter reading and tune for the dip.

6. The preceding Step completes Transmitter Tuning procedure. Return the function switch to REC. position.

Note that the 270B operates at reduced power in TUNE-CW mode. The P.A. cathode bias resistor, R..... is in the circuit during TUNE and CW operation. Its value tends the bias resistor is shorted out, and the 270B operates at full P.E.P. input rating.

VOLUME TRANSMISSION

After tuning up as outlined above, switch to REC. position. Press the microphone switch and then carefully

set the CAR, BAL. control for minimum meter reading. While speaking into the mike, slowly rotate the MIC. GAIN control until occasional peak readings of 100 to 120 ma. are obtained. With most microphones, the MIC. GAIN control will be set between 8 and 12 o'clock, but it may vary considerably. The ALC circuit will help limit cathode current, but turning the MIC. GAIN up too high will still produce flat-topping and splatter signals, so it is important to hold it down. The meter is quite heavily damped, and its reading with average voice modulation may not look very impressive, but the meter peaks are going well over the 250 watt power rating of your Sencor transmitter.

NOTE

Transmitter will not modulate properly with Function Switch in CAL. position.

AM OPERATION (Single Sideband With Carrier)

1. Turn transmitter to full output on single sideband as described above.
2. Rotate MIC. GAIN control to minimum. Turn CCB.
3. With Push-to-talk pressed, rotate CAR, BAL. control until cathode current is approximately 35 ma.
4. While talking in a normal tone of voice into the microphone, increase MIC. GAIN setting until the meter kicks upward slightly. This setting will result in excellent AM transmission.

CW OPERATION

1. Insert a CW Key in the Key Jack on back of the Transceiver.
2. Close the key and tune the transmitter as outlined in Step 3. Power input will be approximately 150 watts.
3. In CW operation it will be necessary to switch the Function control back to R.F.C. for receiving and then to CW for transmitting.
4. While receiving, the carrier oscillator frequency is located 300 cycles outside the passband of the crystal filter (that, that providing a single heterodyne note, or "single-signal") for CW reception. When transmitting in CW mode, the carrier frequency is moved approximately 300 cycles higher, placing it well inside the passband. This frequency shift is termed "CW-set CW transmit frequency" and avoids the problems encountered when the receive and transmit frequency are exactly the same. This is desirable for voice communication, of course, but when using the CW. Raising mode the receiver must be tuned off frequency several hundred cycles in order to hear an audio tone. By providing this shift automatically, CW operation is greatly simplified.

ALIGNMENT AND TROUBLE-SHOOTING

The alignment procedures presented in this section are positive no-hesay procedures for all-tuned circuits and other adjustments. It is recommended that the procedures be performed in the order presented. However, if complete readjustment is not required (as may be the case when just one tube is replaced), perform just those procedures required. Refer to Figures 5, 6, and 7 for component placement.

RECEIVER ALIGNMENT

Receiver alignment involves only the adjustment of the Second IF coil. The R.F. coils which affect receiver performance are also used in transmit mode. Their adjustment is covered under "TRANSMITTER ALIGNMENT."


1. After allowing approximately five minutes for warm-up, tune the receiver to the middle of any band and at a "quiet" frequency.
2. Adjust the P.A. TUNE, P.A. LOAD, and DRIVER trim pots (controls for maximum background noise).
3. Adjust IF coil (80) for maximum background noise.

5-METER ADJUSTMENT

With antenna disconnected and R.F. Gain fully clockwise, set R.H.H. located on rear panel, for zero meter reading. Minor wire-noise signals are being received.

TRANSMITTER ALIGNMENT

1. Power Amplifier Bias.
 - a. Switch meter to P.A. CATH.
 - b. After allowing approximately five minutes for warm-up, key the transmitter with the microphone switch. Without speaking into the microphone, adjust the CAR, BAL. control for a minimum power amplifier current.
 - c. Again key the transmitter with the microphone switch, and without speaking into the microphone, adjust the P.A. BIAS control on the rear panel. For the delta symbol on the meter, corresponding to 40 mA idling current.
2. Transmitter Circuits. The alignment of transmitter circuits involves the adjustment of tuned circuits in the VFO Amplifier, V1, the Transmitter Mixer, V2, and Driver stage, V3. It is recommended that a dummy load be connected to the antenna jack during the series of adjustments.
 - a. Start first by adjusting 7 mc band. Set tuning dial and driver control as indicated by table I, page 18.
 - b. Set P.A. LOAD control to 9 o'clock.
 - c. Press Mic. Button, Check idling current. It should be on the delta symbol while CAR, BAL. control is set. Adjust P.A. BIAS control, if required.

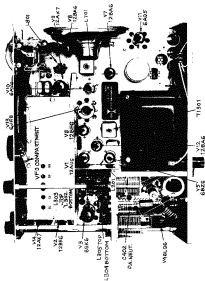

ITEM 4. UNPAID CREDITS 2000 2001 2002 2003 2004

d. With Mic. Button pressed, adjust CAR, BAL. control for slight increase in meter reading, 50 to 60 ma. Adjust P.A. TUNE to resonance (dip).

e. Adjust wails as indicated by alignment chart for maximum meter reading. When reading goes higher than 80 ma., or so, adjust CAR, BAL. for 60 ma. again.

f. Adjust wails carefully for maximum peak. Exercise caution with CAR, BAL. control. Do not exceed 100 ma. Reading for more than a few seconds. Be sure P.A. TUNE control is resonated, (adjusted for "dip" in meter reading).

g. Switch to 1-5 mc. band, and repeat steps (a) through (f), following the tuning chart carefully. Follow this procedure through for each other band.

2. Power Amplifier Neutralization. Perform the power amplifier neutralization adjustment on 20 meters and in the following manner.

a. After allowing approximately five minutes for warm-up, tune the transmitter to approximately 14,250 mc.

b. Position the P.A. LOAD control to the 9 o'clock position, (full counter clockwise).

c. Set meter switch to P.A. CATH.

d. Key the transmitter with the microphone switch, and without speaking into the microphone, adjust the CAR, BAL. control for a power amplifier current of approximately 100 ma. Adjust the DRIVER control for peak. Quickly adjust CAR, BAL. to 100 ma. again if it is increased to a higher reading.

e. With the Mic. Button still pressed, rotate the P.A. TUNE control through its range from 9 o'clock to 3 o'clock. You will note a pronounced "dip" in meter reading at resonance. Observe any tendency for the meter to "peak" above the 100 ma. plateau on either side of resonance. If there is such a peak, adjust C402, the P.A. Neutralizing trimmer to suppress the peak. When properly neutralized, the meter reading will hold steadily at 100 ma. except for the sharp dip at resonance but there will be no peak above the 100 ma. level.

f. Key the transmitter with the microphone switch and re-adjust the CAR, BAL. control for minimum power amplifier current. Power amplifier idling current should be on the delta symbol. If not, repeat the power amplifier bias adjustment described on Page 13.

3. Carrier Frequency Adjustment. A dummy load wattmeter and audio generator are required for this adjustment.

a. After allowing a five-minute warm-up period, tune the transmitter to approximately 14,250 mc.

b. Key the transmitter with the microphone switch and adjust the CAR, BAL. control for minimum power amplifier current.

c. Insert 1500 cycles of audio from an audio generator into the Mic. Jack located on the front panel. Adjust the gain of the audio generator and the Mic. Gain control (R1404) until the wattmeter reads approximately 10 or 15 watts.

d. Adjust the first IF coil (L701) for maximum output. Adjust both taps of the balanced modulator transformer (T1301) for maximum output.

e. Increase gain of audio generator and wattmeter reading 40 watts. Sweep potentiometer to 300 cycles and adjust the normal sideband driving oscillator trimmer (C1512) for a reading of 10 watts.

f. Switch to the Opposite Sideband. Adjust the Opposite Sideband Carrier Oscillator trimmer (C1704) for a reading of 10 watts.

g. Re-check with audio generator set at 1500 cycles and 40 watts. Sweep down to 300 and re-adjust Carrier Oscillator capacitor, if required, for 10 watts.

3. Carrier Balance Adjustment. Several times during the preceding adjustments, the CAR, BAL. control has been adjusted for varying reasons. Be sure that this control is always re-set for exact null before operating.

NOTE

If at any time the Balanced Modulator Tube (6X11B) is replaced it may be necessary to adjust R1385, the Micro Potentiometer located on the 6X11B tube socket, for exact Carrier Balance Null. This control is factory set and should not need adjustment except in case of tube replacement. A recommended way of adjusting the control is to locate your transmitting signal on an external receiver. Then adjust R1382 for minimum carrier while flexing to the external receiver.

VFO CALIBRATION

1. After allowing approximately five minutes for warm-up, tune the receiver near 3800 KC. Using a frequency standard or a 100 KC crystal calibrator as an accurate signal source, tune the signal for zero beat and note the corresponding dial reading. If the 3800 KC signal does not zero beat at 3800 on the dial, adjust the 80 Mhcy. trimmer until it does.

2. In a similar manner, check each of the other bands in the normally used portion of the band. For example, 7300 kc., 14,500 or 14,300, 21,300, or 21,400, 28,800 or whichever portion of 10 meters is normally used. Accuracy in other parts of the bands will be quite good; but remember that the Cygnet is not to be considered a frequency standard. Be cautious when operating near band edges. FCC regulations require that every amateur radio station have a means available for measuring its transmitting frequency.

If a frequency meter or frequency counter is available, the information contained in Table II can be used to perform direct VFO and Carrier Oscillator frequency measurements.

TROUBLESHOOTING

The information contained in Figures 5, 6, and 7, together with the voltage and resistance chart and trouble-

shooting guide should be sufficient for most troubleshooting by the average licensed amateur radio operator.

VOLTAGE AND RESISTANCE CHART

TUBE TYPE	R. Res. T. Trans.	Socket Pin Numbers							
		1	2	3	4	5	6	7	8
V1 12AU6 VFO Amp.	R Volts T Volts Ohms	-4 -4 1.3K	0 0 0	0 0 0	12.6AC 12.6AC 0.7	45 50 0	45 50 +	0 0 0	
V2 12BE6 Trans. Mixer	R Volts T Volts Ohms	-1.5 -1.6 600K	0 0 0	0 0 0	12.6AC 12.6AC 0.2	250 250 +	-2 175 11K	0 0 15K	
V3 6XK5 Driver	R Volts T Volts Ohms	0 0 10	-6.7 -6.7 100K	0 0 0	0 0 0	6.3AC 6.3AC 0.1	NC NC NC	255 265 +	0 225 0.2
V4 6X4 Pwr. Amp.	R Volts T Volts Ohms	NC NC NC	-25 -25 5K	0 0 1.0	12.6AC 12.6AC 0.1	6.3AC 6.3AC 0.1	-75 -75 68	0 225 0.1	NC NC NC
V5 6BE6 Rec. R. F.	R Volts T Volts Ohms	0 0 1.1M	0 0 0	6.3AC 6.3AC 0.1	0 0 0	255 255 24K	115 0 40K	0 0 0	
V6 12BE6 Rec. Mixer	R Volts T Volts Ohms	0 0 100K	0 0 0	0 0 0	12.6AC 12.6AC 0.1	250 265 11K	-100 0 40K	-5 -5 40K	
V7 12BA6 1st I. F.	R Volts T Volts Ohms	-1.8 -1.8 200	0 0 0	0 0 0	12.6AC 12.6AC 0.1	210 220 15K	48 50 50K	0 0 0	
V8 12BA6 2nd I. F.	R Volts T Volts Ohms	-1.7 -1.7 100K	0 0 0	0 0 0	12.6AC 12.6AC 0.1	265 225 15K	105 0 40K	0 0 0	
V9 12AX7 Det. A. F.	R Volts T Volts Ohms	55 -5 400K	-1 -1.6 11K	0 0 200	0 0 0	0 0 0	145 0 125K	-25 -25 1M	0 0 0
V10 6AU6 AGC Amp.	R Volts T Volts Ohms	0 0 200K	1.0 1.6 5K	6.3AC 6.3AC 0.2	0 0 0	0 0 0	0 0 700K	225 175 100K	
V11 6AQ5 A. F. Output	R Volts T Volts Ohms	-9 -9 200K	0 0 0	0 0 0	6.3AC 6.3AC 0.2	257 262 10K	215 0 12K	NC NC NC	
V12 12BA6 100KC Cal.	R Volts T Volts Ohms	0 0 1M	0 0 0	0 0 0.1	12.6AC 12.6AC 100K	225 175 200K	75 50 0		
V13 6JH8 Bal. Mod.	R Volts T Volts Ohms	0 45 2K	0 -45 25K	0 -75 500K	6.3AC 6.3AC 0.2	0 0 0	-1.4 -1.4 35K	0 0 0	0 100 25K
V14 12AX7 Mic. Amp.	R Volts T Volts Ohms	30 45 1M	0 0 0	0 0 0	0 0 0	0 0 0	0 75 400K	0 0 10K	6.3AC 6.3AC -0.2

**TABLE I
TRANSMITTER ALIGNMENT CHART**

Beat	Probe Setting	Tuning Dial Unit	Adjust Cath.
40	12 o'clock	7150 KC	1.005, 1.305, 1.605
60	12 o'clock	7300 KC	1.001, 1.301
80	12 o'clock	1430 KC	1.205, 1.305
15	12 o'clock	2175 KC	1.001, 1.304, 1.604
10	12:30 o'clock	2945 KC	1.005*, 1.104*, 1.205, 1.305

Note: Adjust 40 Meter band first.

*To adjust 1.002, connect one end of a 2.7K resistor to the hot side of L104. Connect a .10 of disc capacitor from ground to the other end of the resistor. Adjust L102. To adjust 1.104, use the same procedure as above, but connect the capacitor and resistor to L102.

TROUBLESHOOTING CHART

DEFECT	POSSIBLE CAUSE
PA Idling Current Unstable	1. Defective Power Amplifier Tube (V4). 2. Defective HIAS control and/or associated components. 3. Defective bias power supply.
Instability to Load per Operation Instructions	1. Antenna not resonant at operating frequency. 2. Defective transmission line. 3. Defective antenna loading coils. 4. Tubes V3 through V4 defective.
Insufficient Sideband Suppression	1. Carrier Oscillator (Q3) operating on incorrect frequency. 2. Crystal filter defective or misrouted.
Insufficient Carrier Suppression	1. Tube V13 defective. 2. Transformer T14H defective or misrouted. 3. Carrier Oscillator (Q3) operating on incorrect frequency.
Microphonics in Transmitter	1. Tubes V13 and/or V14 defective. 2. H-coil L7H1 Defective or incorrectly adjusted. 3. Microphone defective.
Low Receiver Sensitivity	1. Tubes V7 through V10 defective. 2. Incorrect adjustment of the transmitter Pi-Network. 3. H-coil L7H1 incorrectly adjusted or defective. 4. K1 relay contacts defective.

**TABLE II
VFO AND CARRIER OSCILLATOR FREQUENCIES**

Tuning Dial	VFO Injection Frequency	Q1 Osc. Frequency	Q3 Osc. Carrier Frequency
5500 KC	9000 KC	9000 KC	5500 KC
6000 KC	9500 KC	9500 KC	5500 KC
7000 KC	11,900 KC	11/216250 KC	5500 KC
7500 KC	12,000 KC	11/216400 KC	5500 KC
14,000 KC	3500 KC	3500 KC	5500 KC
14,150 KC	3650 KC	3650 KC	5500 KC
21,000 KC	15,500 KC	11/217750 KC	5500 KC
21,420 KC	15,950 KC	11/217925 KC	5500 KC
26,000 KC	22,900 KC	11/211,250 KC	5500 KC
28,700 KC	24,500 KC	11/2112,100 KC	5500 KC

PARTS LIST

RESISTORS

All resistors are 1/4 watt, 10% tolerance, unless otherwise noted.

R101	1.5K
R102	47K
R103	2.7K
R104	2.7K
R105	10K-2W
R201	27K
R202	100K
R203	100K
R204	10K-2W
R205	470K
R206	2.7K
R301	100K
R302	100K
R303	100 ohm
R401	100 ohm
R402	25K band pot
R403	4.7K
R404	1K
R405	1 ohm 5W
R406	100 ohm 5W
R501	100K
R502	220K
R503	470 ohm
R504	10K
R505	25K R.F. Gain
R506	10K
R507	470K
R601	47K
R602	470 ohm
R603	10 meg
R700	22K-2W
R701	1K
R702	33K
R703	25K 5-Meter Zero
R704	1K
R705	47K 1W
R801	100K
R802	1K
R803	10K
R902	47K
R903	270 ohm
R904	270K
R905	47K
R906	10 meg.
R907	1 meg.
R908	47K
R909	100K
R1000	470K
R1001	270K
R1002	1 meg.
R1004	4.7K
R1005	5K
R1001	1 meg A-F, Gain Pot

R1301	1 meg.
R1302	27K
R1303	100K
R1304	1K
R1305	10K
R1306	10K Quad. Pot.
R1307	270K
R1308	10K-2W
R1309	27K
R1310	27K
R1311	5K Car. Bal. Pot.
R1309	1K
R1310	100K
R1311	27K
R1401	1.5K
R1402	47K
R1403	1K
R1404	1 meg Mic. Gain Pot
R1405	2.2 meg.
R1406	270K
R1407	470K
R1408	47K
R1501	10K
R1502	2.2K
R1503	1.5K
R1504	100 ohm
R1601	2.7K
R1602	1.5K
R1603	1K
R1604	470 ohm
R1605	2.7K
R1606	1K
R1607	470 ohm
R1701	4.7 ohm
R1702	10K-2W
R1703	150K-2W
R1704	150K-2W
R1705	800 ohm-10W
R1706	1.2K-5W
R1707	270K
R1708	2.7K
R1709	800 ohm-10W
R1710	900 ohm 10W
R1711	100K

TRANSISTORS

Q1	2N706 Oscillator
Q2	2N1301 Buffer
Q3	2N706 Carrier Oscillator

DIODES

D201	1N34A
D101	1 Amp-600 V
D102	1 Amp-600 V
D1001	1N34A
D1201	1N34A

D1701	1N3195
D1702	1N3195
D1703-1706	1N3195
D1707-1710	1N3195
D1711	1N4742 Zener
D1712	1N3195

CAPACITORS

Unless otherwise specified, a capacitor is fixed in place (fixed) with a whole number and in micro farads with a decimal number.

C101	.01 +80-20%, 500V Disc
C102	44 pf Disc
C103	60 pf Disc
C104	.01 +80-20% 500V Disc
C105	60 pf 5% Disc
C106	25 pf 5% Disc
C107	100. 20% 1KV Disc
C201	10 +10% 500V Mylar
C202	.01 +80-20% 500V Disc
C203	50 pf 2% Disc
C204	20 pf 10% Disc
C205	.01 +80-20% 500V Disc
C206	400 pf 5% SM
C207	2 pf 10% 500V Ceramic
C208	100. 20% 1KV Disc
C301	100. 20% 1KV Disc
C302	60 pf 5% Disc
C303	20 pf 1% Pkgd
C304	15 pf 10% Disc
C305	310 pf 5% SM
C306	15 pf 20V Disc
C307	100. 20% 1KV Disc
C308	270 pf 20% Disc
C401	3.3 pf 10% 1KV
C402	20 pf Next. Trimmer
C403	.01 +80-20% 500V Disc
C404	100. 20% 1KV Disc
C405	.01 +80-20% 500V Disc
C407	250 5% 2500V Mylar
C408	100 pf P.A. Tube
C409	100 10% 5KV Disc
C410	150 10% 500V Mylar
C411	520 pf P.A. Load
C501	.01 +80-20% 500V Disc
C502	.01 +80-20% 500V Disc
C503	40 pf 10% 1KV Disc
C601	.01 +80-20% 500V Disc
C602	220 10% Disc
C603	400 pf 5% SM
C701	1 mfd 20V
C702	50 pf 5% Disc
C703	.01 +80-20% 500V Disc
C704	.01 +80-20% 500V Disc
C705	.01 +80-20% 500V Disc

C802 .01 $\pm$ 80-20% 500V Disc
 C803 50 pF 5% Disc
 C804 50 pF 5% Disc
 C805 .01 $\pm$ 80-20% 500V Disc
 C806 120 pF 50V Disc
 C807 .002 20% 1KV Disc
 C808 150 pF 10% Disc
 C809 2 mil 450V Electrolytic
 C810 200 pF 20% Disc
 C811 .002 20% Disc
 C812 .001 20% Disc
 C1001 .05 $\pm$ 10% 200V Mylar
 C1002 .05 $\pm$ 10% 200V Mylar
 C1003 .001 20% Disc
 C1004 .01 $\pm$ 80-20% 500V Disc
 C1101 5 mil 450V
 C1102 .001 20% Disc
 C1201 60 pF Trimmer
 C1202 150 pF 10% Disc
 C1203 50 pF 5% Disc
 C1301 .01 $\pm$ 80-20% 500V Disc
 C1302 .01 $\pm$ 80-20% 500V Disc
 C1303 .01 $\pm$ 80-20% 500V Disc
 C1304 .01 $\pm$ 80-20% 500V Disc
 C1305 .50 $\pm$ 80-20% 500V Disc
 C1306 250 pF 10% Disc
 C1307 .002 20% 1KV Disc
 C1401 .01 $\pm$ 80-20% 500V Disc
 C1402 .1 $\pm$ 10% 400V Mylar
 C1403 .01 $\pm$ 80-20% 500V Disc
 C1404 100 pF 10% Disc
 C1405 1 mil 400V
 C1406 .01 $\pm$ 80-20% 500V Disc
 C1501 15 pF 5% Disc
 C1502 8 pF Pot. Trimmer
 C1503 30 pF 5% Disc
 C1504 8 pF Pot. Trimmer
 C1505 170 pF $\pm$ 2500 $\pm$ 10% Disc
 C1506 170 pF $\pm$ 2500 $\pm$ 10% Disc
 C1507 .01 $\pm$ 80-20% 500V Disc
 C2A 50 pF Driver Tuning
 C2B 50 pF Driver Tuning
 C1601 10 pF Selected
 C1602 3 pF Trimmer
 C1603 70 pF Selected
 C1604 40 pF Trimmer
 C1605 44 pF Selected
 C1606 15 pF Trimmer
 C1607 127 pF Selected
 C1608 15 pF Trimmer
 C1609 35 pF Selected
 C1610 15 pF Trimmer
 C1611 2 pF Dial Set Trimmer
 C1612 70 pF Main Tuning
 C1613 22 pF N220
 C1614 .01 $\pm$ 80-20% 500V Disc
 C1615 270 pF 5M
 C1616 450 pF 5M
 C1617 27 pF 5M

C1618 .01 $\pm$ 80-20% 500V Disc
 C1619 .01 $\pm$ 80-20% 500V Disc
 C1620 .002 20% 1KV Disc
 C1701 .0047 1KV
 C1702 .0047 1KV
 C1703 100 mil 15V
 C1704 .01 $\pm$ 80-20% 500V Disc
 C1705 .01 $\pm$ 80-20% 500V Disc
 C1706 2 mil 450V Electrolytic
 C1707 40 mil 500V Electrolytic
 C1708 40 mil 500V Electrolytic
 C1709 50 mil 150V Electrolytic
 C1710A 40 mil 450V Electrolytic
 C1710B 40 mil 450V Electrolytic
 C1711 80 mil 150V Electrolytic
 C1712 80 mil 150V Electrolytic
 C1713 .01 $\pm$ 80-20% 500V Disc
 C1714 .002 $\pm$ 20% Disc

COILS

L101 15 MTR VFO Amp
 L102 10 MTR VFO Amp
 L103 VFO Amp
 L104 10 MTR VFO Amp
 L201 80 MTR Mixer
 L202 40 MTR Mixer
 L203 20 MTR Mixer
 L204 15 MTR Mixer
 L205 10 MTR Mixer
 L301 80 MTR Driver
 L302 40 MTR Driver
 L303 20 MTR Driver
 L304 15 MTR Driver
 L305 10 MTR Driver
 L306 82 μ
 L401 82 μ
 L402 22 μ
 L403 IF Network
 L404 30 μ
 L701 5500 K Ω E. F.
 L801 5500 K Ω E. F.
 L1501 200 μ
 L1502 VFO Coil
 L1601 500 μ
 L1602 500 μ
 L1603 500 μ
 L1604 500 μ
 L1701 17 μ
 L1702 500 μ

TRANSFORMERS

T1101 A. F. Output Trans.
 T1201 5500 K Ω Bal. Mod. Trans.
 T1701 Power Trans.
 Z401 Parasitic Suppressor

RELAYS

K1 3 PST Relay, 12 VDC Coil

CRYSTALS

Y1201 100 K Ω Crystal Calibrator
 Y1301 5500 K Ω Carrier Oscillator
 Y1501 5500.3 K Ω Carrier Oscil.

TUBES

V1 12AU6 VFO Amplifier
 V2 12BE6 Trans. Mixer
 V3 6XQ6 Driver
 V4 6LQ6 Power Amp.
 V5 6BZ6 Rec. RF Amp.
 V6 12BE6 Rec. Mixer
 V7 12BA6 First I.F. Amp.
 V8 12BA6 Second I.F. Amp.
 V9 12AX7 Prod. Det. & Rec. A.F.
 V10 6AV6 AGC Amp.
 V11 6XQ6 A. F. Output
 V12 12BA6 300 K Ω Cal.
 V13 6JH6 Bal. Mod.
 V14 12AX7 Mic. Amp.

SWITCHES


S1-A, B, C, D, E Band Switch
 S2 Power On & Off
 (part of RF Gain)
 S3 Cal. Rec. Tune/CW
 S4 P. A. Cathode/S-Meter
 S5 Select/Scan Selector

ACCESSORIES

THE FOLLOWING ACCESSORIES ARE DESIGNED FOR USE WITH THE MODEL 270B TRANSCEIVER:




(A) MODEL 14-A PLUG-IN DC CONVERTER FOR 12 TO 14 VOLT DC OPERATION




(B) MODEL 1200-W LINEAR AMPLIFIER
1200 WATTS P.E.P. INPUT, 5 BANDS




(C) MODEL 500 EXTERNAL VFO FOR SEPARATE
RECEIVE-TRANSMIT FREQUENCY. PLUGS
DIRECTLY INTO BACK OF 270B



(D) MODEL 510X CRYSTAL-CONTROLLED
EXTERNAL OSCILLATOR. PLUGS DIRECTLY
INTO BACK OF 270B



(E) SWAN HYBRID PHONE PATCH MODEL EP-1



(F) MODEL VLS PLUG-IN
VOX UNIT.
PLUGS DIRECTLY INTO
SIDE OF 270B

See your Swan Dealer for further information.

