AVRO CANADA

ELECTRICS ACCESS PANEL

1 — TRANSFORMER RECTIFIER UNITS
ALTERNATOR CONTROL UNIT
POWER DISTRIBUTION PANEL
INERTIA CRASH SWITCH
DIFFERENTIAL CURRENT RELAYS
FUEL TRANSFER PUMPS
FUEL PRESSURE RELIEF VALVE
FUEL PRESSURE REGULATOR

HYDRAULIC ACCESS PANEL

2 — UTILITY COMPENSATOR
FRONT ENGINE MOUNTS
HEAT EXCHANGER
ACCELEROMETER

No 4 SERVICE PANEL

3 — GROUND POWER
FIRE EXTINGUISHER BOTTLES

No 3 SERVICE PANEL

31 — FLYING CONTROLS
FUEL PRESSURE RELIEF VALVES
FUEL PRESSURE REGULATORS
FLYING CONTROL ACCUMULATORS

No 2 SERVICE PANEL

4 — UTILITY ACCUMULATORS
FLYING CONTROL COMPENSATOR
FLYING CONTROL PUMPS
GEAR BOX OIL FILLER

No.1 SERVICE PANEL

5 — FUEL PUMPS
FUEL PUMP CONTROL VALVES
GEAR BOX ACCESS

6 — ENIGINE OIL FILLER ACCESS SPEC. MIL-L-7808

7 — RECEPTACLE CONNECTING GROUND POWER

8 — MASTER REFUELLING DOOR

9 — ENGINE STARTING

10 — ACCESS FOR FIRE EXTINGUISHING

11 — ENGINE ACCESS

12 — AIR CONDITIONING
L-BAND ANTENNA
ACCESS PANEL

13 — REAR ENGINE MOUNT
ASSEMBLE THIS MOUNT AFTER REAR INBOARD MOUNT IS ASSEMBLED TORQUE LOCKNUT 1200-1600 LB IN.

14 — HOOK LADDER HERE

15 — EMERGENCY CANOPY OPENING OTHER SIDE

16 — BATTERY IN WHEEL WELL
NITROGEN CHARGING PRESS 5000 LB SQ IN

17 — SLING RADOME BEFORE UNLATCHING REMOVE STRAIGHT FORWARD

18 — JACK HERE

19 — ELECTRONICS ACCESS DOOR

20 — ACCESS TO PACK RELEASE

21 — ARMAMENT HOISTING POINT

22 — WARNING UNCOUPLE DISCONNECTS BEFORE LOWERING PACK

23 — CRADLE PACK BEFORE RELEASING

24 — GROUND HERE ATTACHMENT FOR REFUELLING HOSE

25 — JACK HERE
MAX. JACKING WT. 58000 LB.

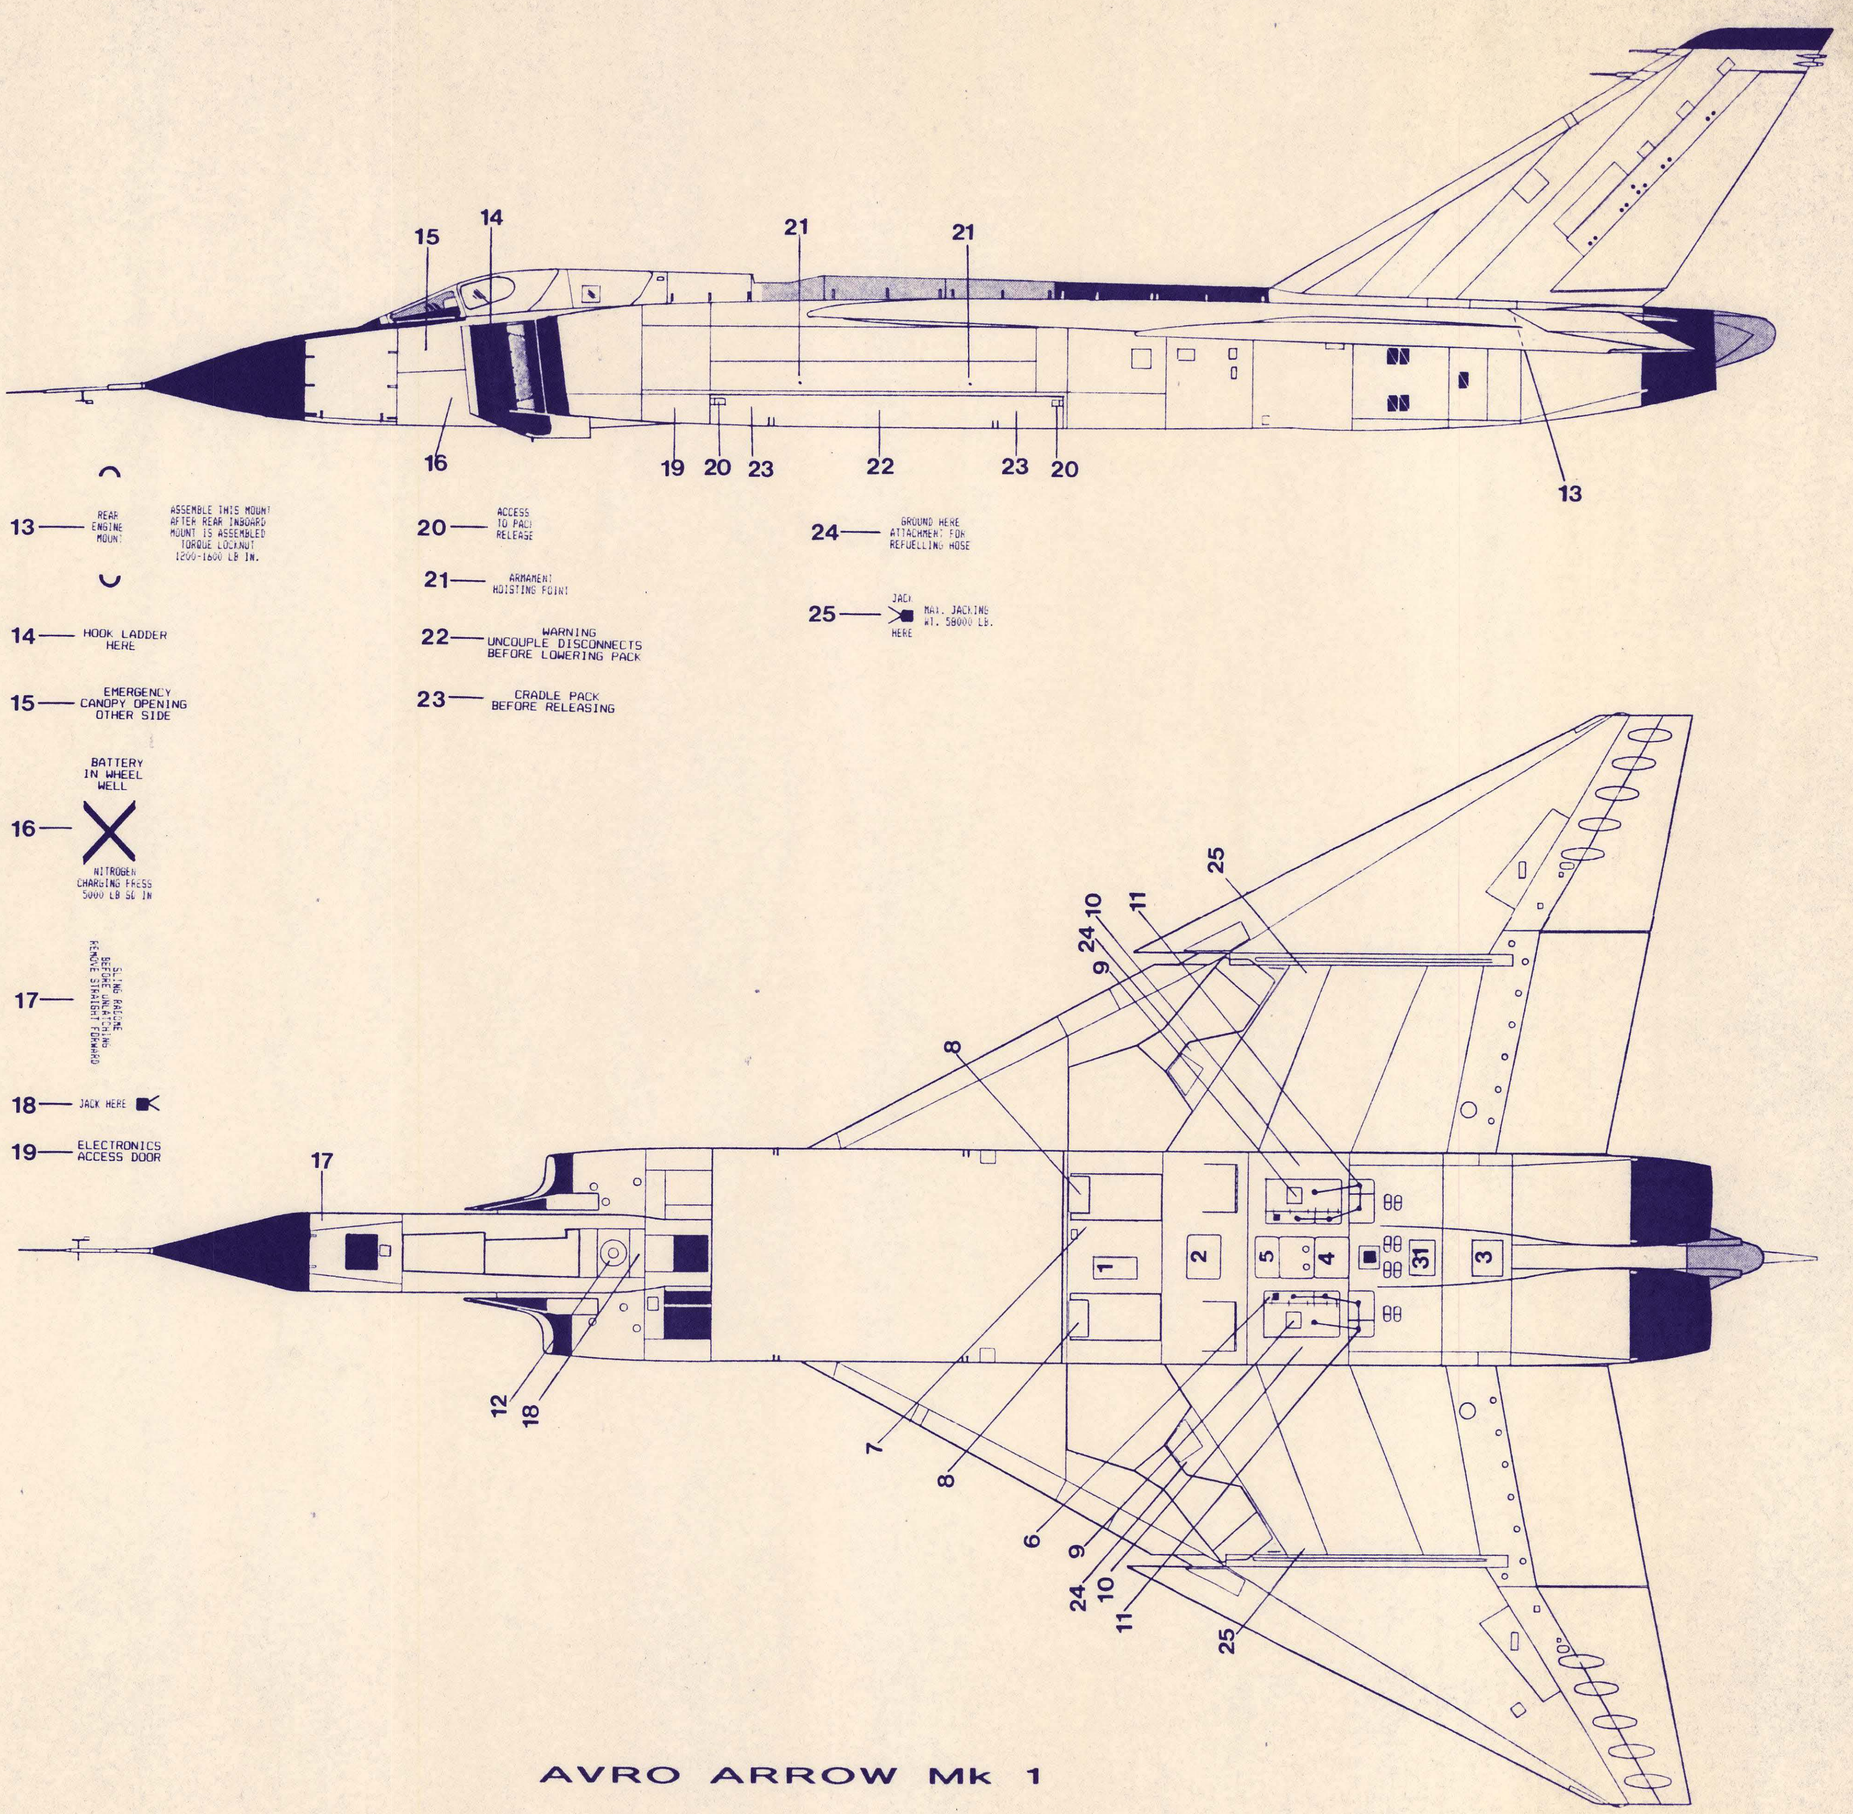

AVRO ARROW Mk 1

TL.163-0050