


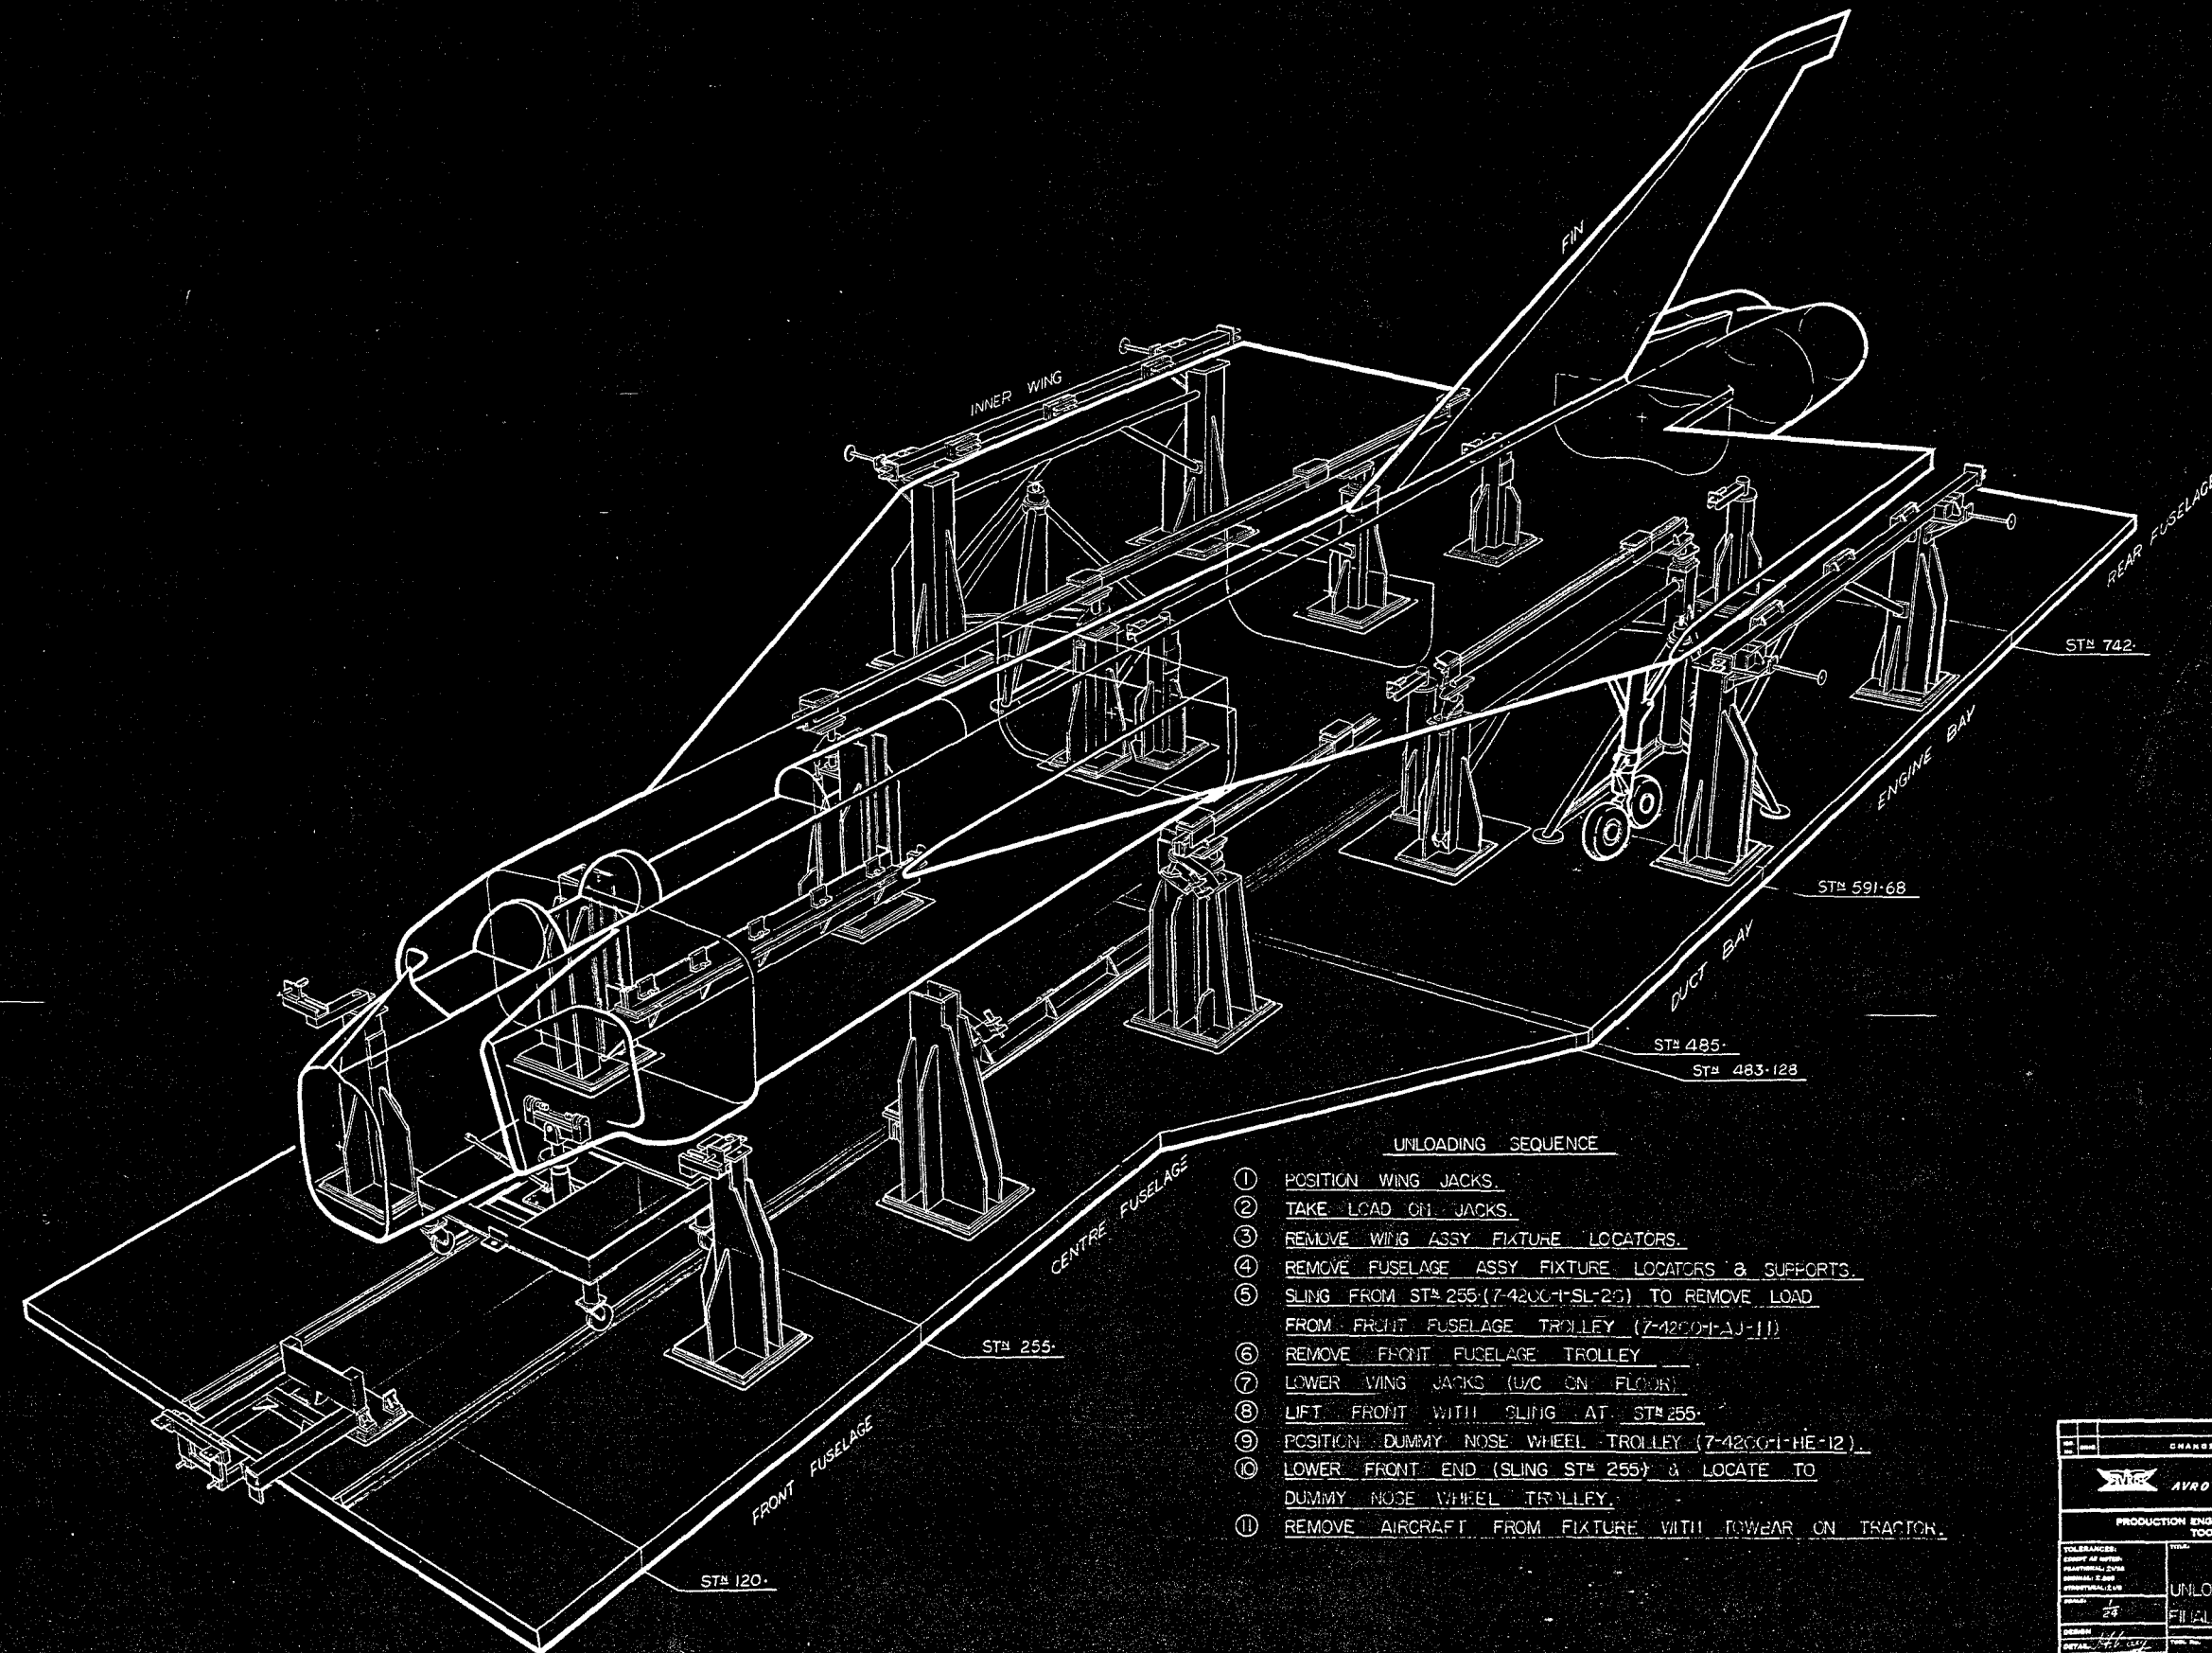

UNLOADING SEQUENCE

- ① POSITION WING JACKS.
- ② TAKE LOAD ON JACKS.
- ③ REMOVE WING ASSY FIXTURE LOCATORS.
- ④ REMOVE FUSELAGE ASSY FIXTURE LOCATORS & SUPPORTS.
- ⑤ SLING FROM ST# 255 (7-4200-1-SL-20) TO REMOVE LOAD FROM FRONT FUSELAGE TROLLEY (7-4200-1-AJ-11).
- ⑥ REMOVE FRONT FUSELAGE TROLLEY.
- ⑦ LOWER WING JACKS (W/C ON FLOOR).
- ⑧ LIFT FRONT WITH SLING AT ST# 255.
- ⑨ POSITION DUMMY NOSE WHEEL TROLLEY (7-4200-1-HE-12).
- ⑩ LOWER FRONT END (SLING ST# 255) & LOCATE TO DUMMY NOSE WHEEL TROLLEY.
- ⑪ REMOVE AIRCRAFT FROM FIXTURE WITH TOWBAR ON TRACTOR.

CHANGES		DATE	BY	CHKD
AVRO AIRCRAFT LIMITED				
PRODUCTION ENGINEERING DEPARTMENT TOOL DESIGN				
TOLERANCES: UNLESS OTHERWISE SPECIFIED: DIMENSIONS: 2.00 FINISH: 2.00 MATERIAL: 2.00	ITEM: C-10.5	2		
DESIGN DETAIL: 1.00	UNLOADING SEQUENCE	2		
CHECKED APPROVED: 1.00	7-4200-F-1			
DATE: 10/14/53				