

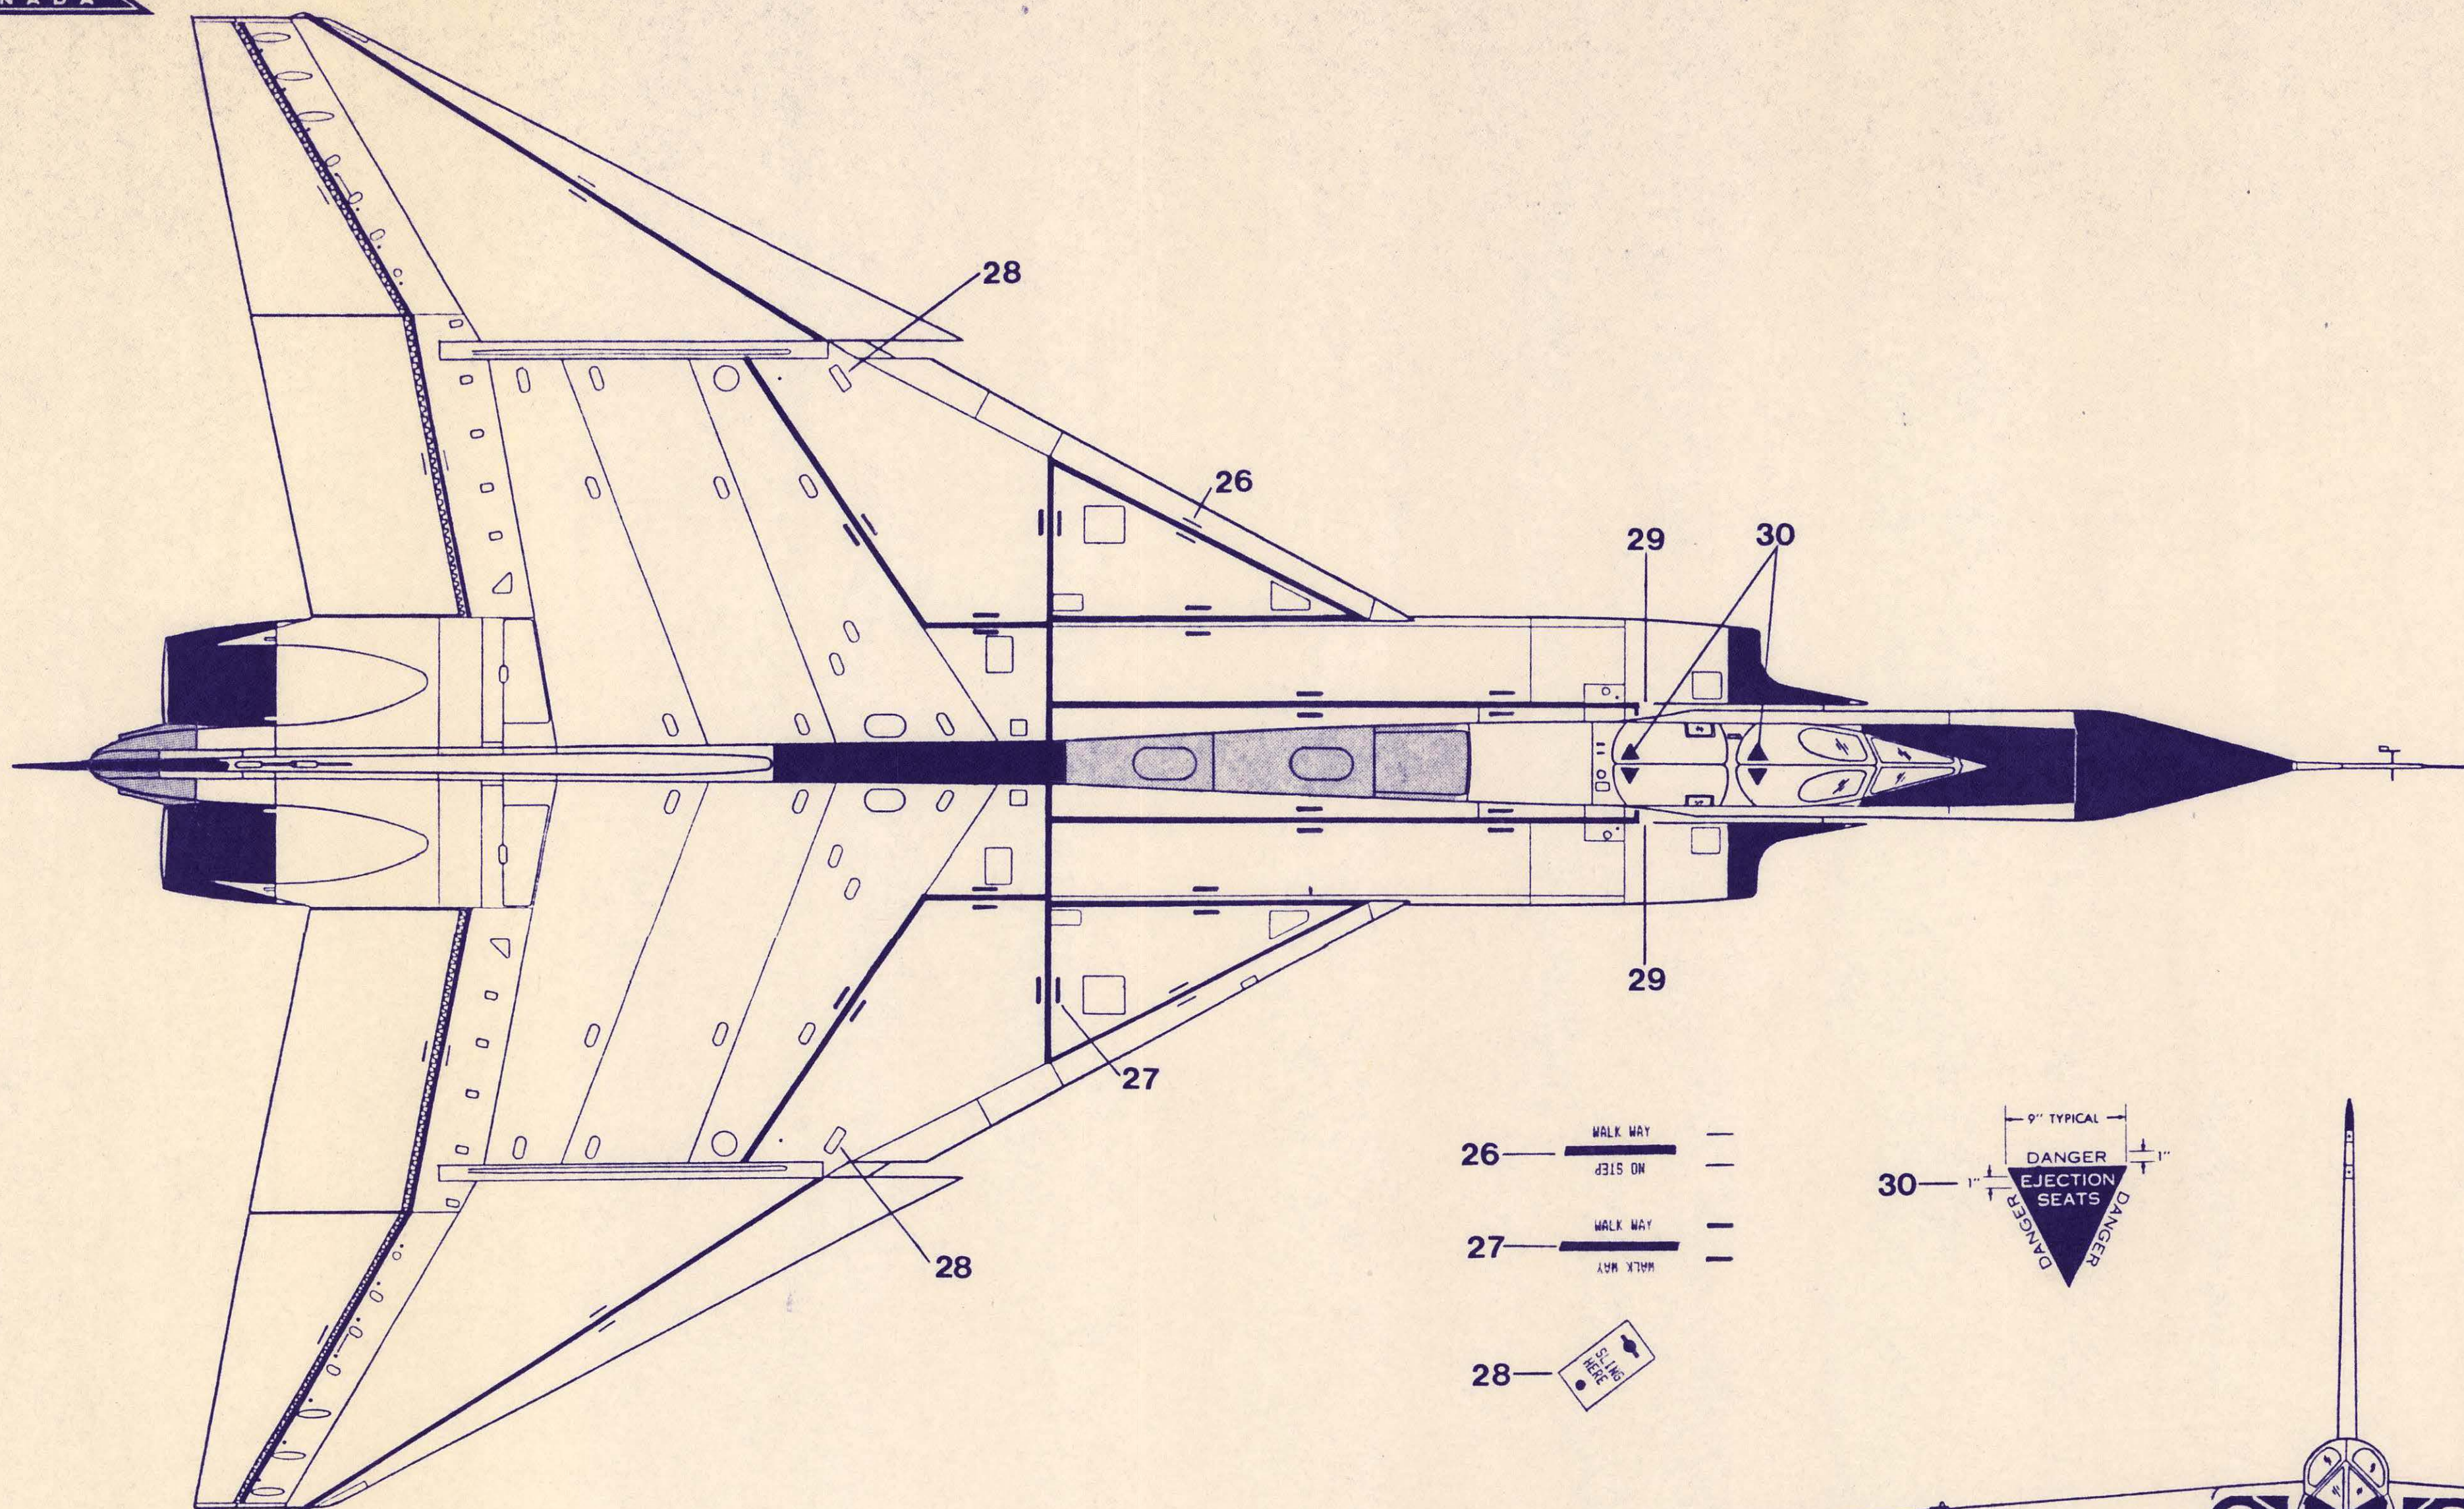


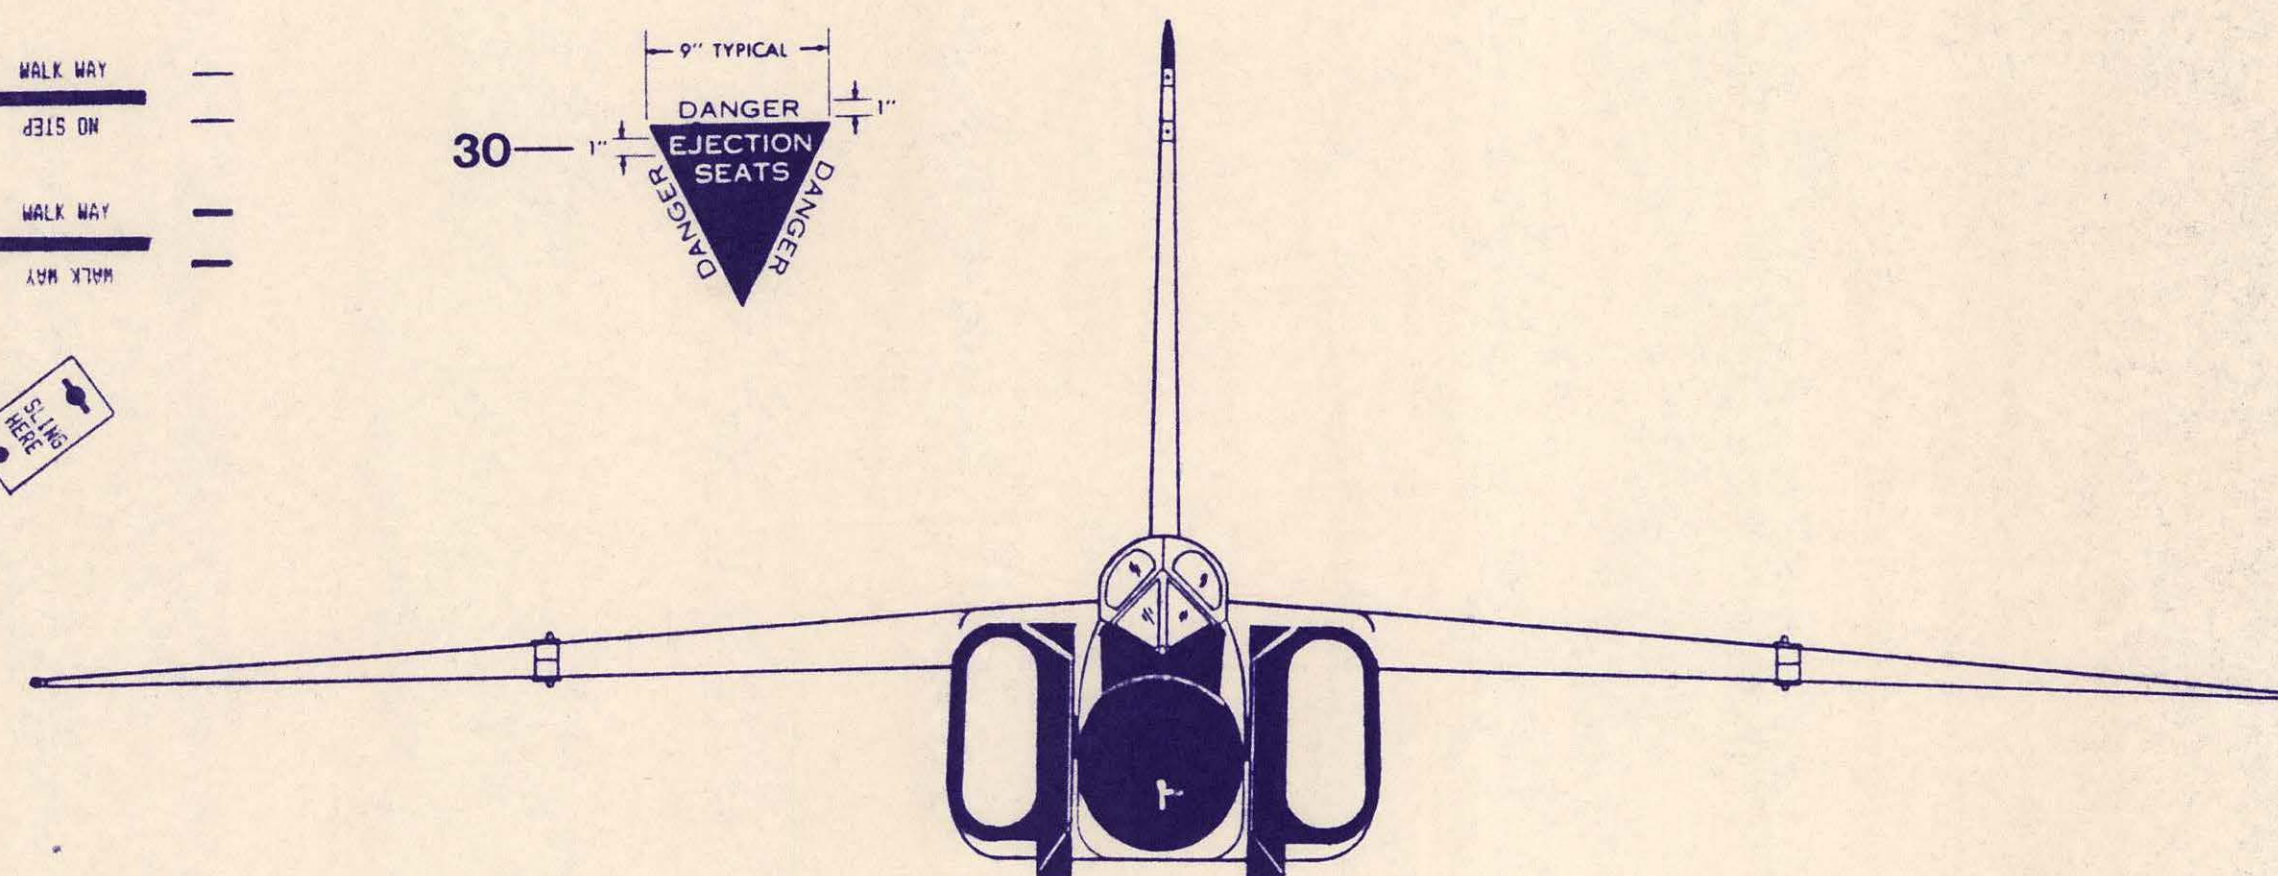

- 26 — WALK WAY — NO STEP —
- 27 — WALK WAY —
- 28 — SLING HERE —

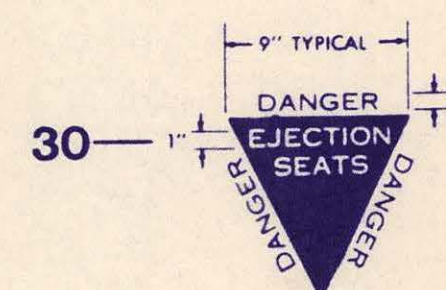


- 13 — REAR ENGINE MOUNT
- ASSEMBLE THIS MOUNT AFTER REAR INBOARD MOUNT IS ASSEMBLED TORQUE LOCKWAS 1200-1500 LB IN.
- 19 — ELECTRONICS ACCESS DOOR

- 26 — EMERGENCY CANOPY OPENING
- PUSH TO OPEN STAND BACK FULL HANDLE

- 29 — SLING HERE

- 20 — ACCESS TO PACK RELEASE
- 21 — ARMAMENT HOISTING POINT
- 22 — WARNING UNCOUPLE DISCONNECTS BEFORE LOWERING PACK
- 23 — CRADLE PACK BEFORE RELEASING

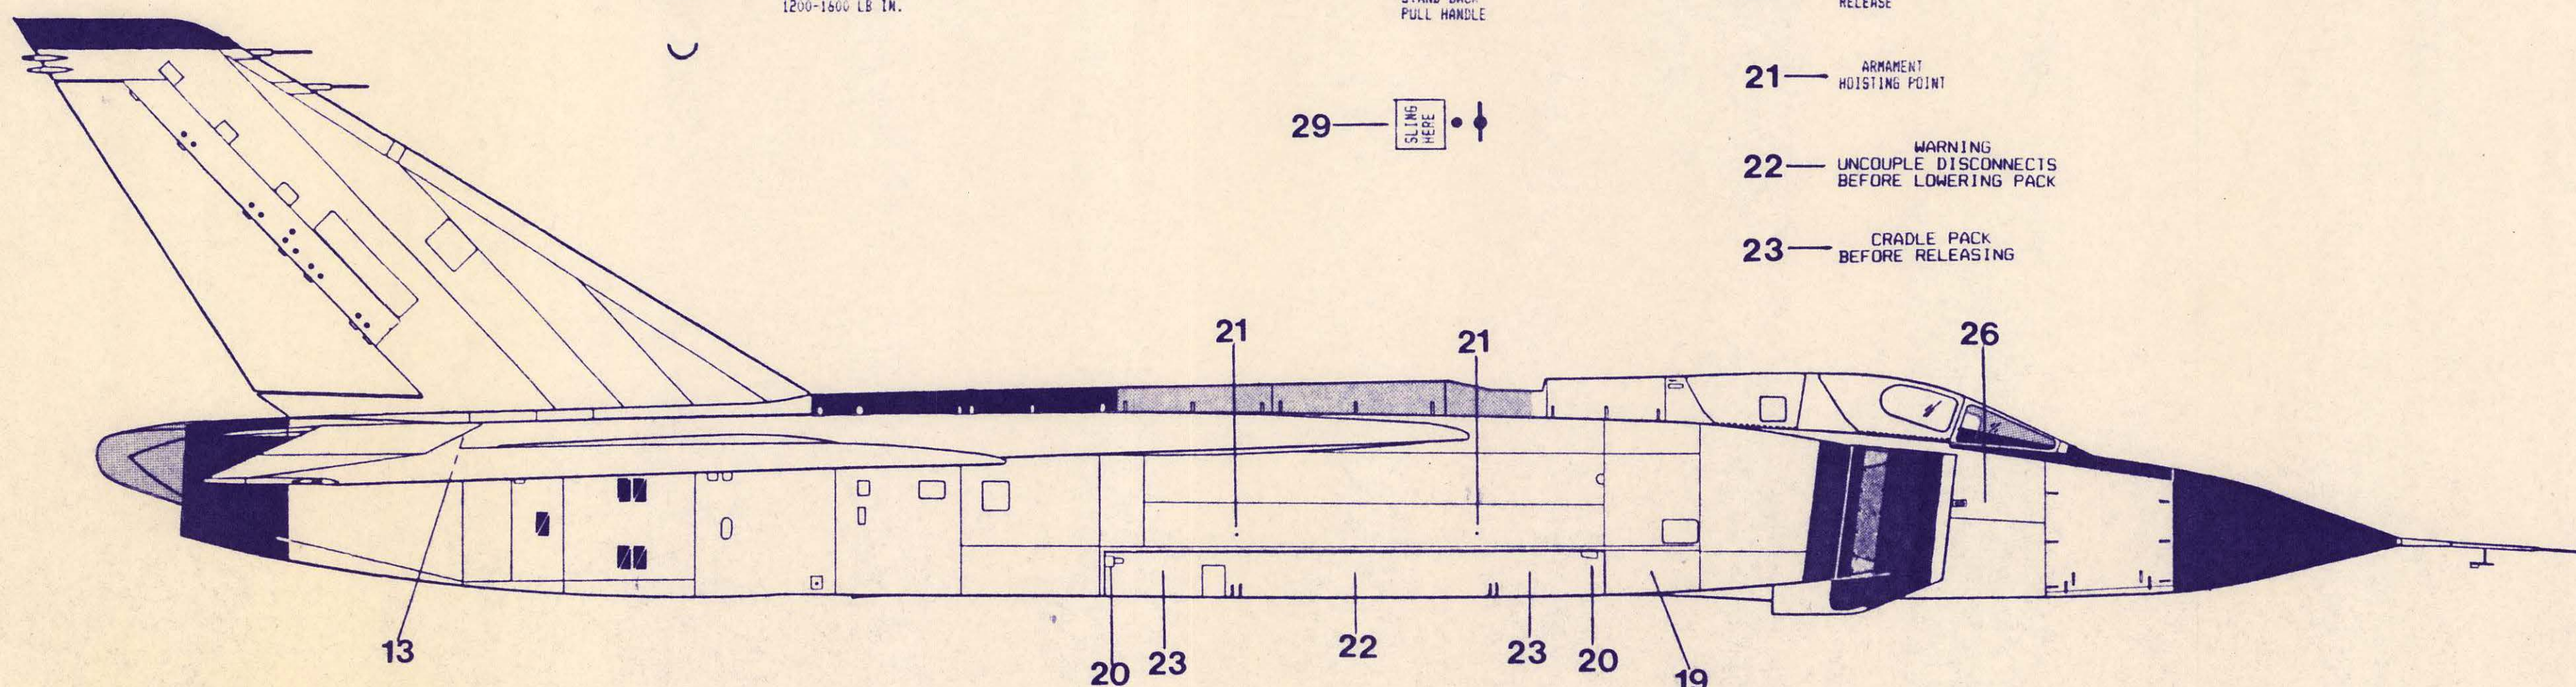

AVRO ARROW MK 1