


CLYDE
LOGGING
METHODS

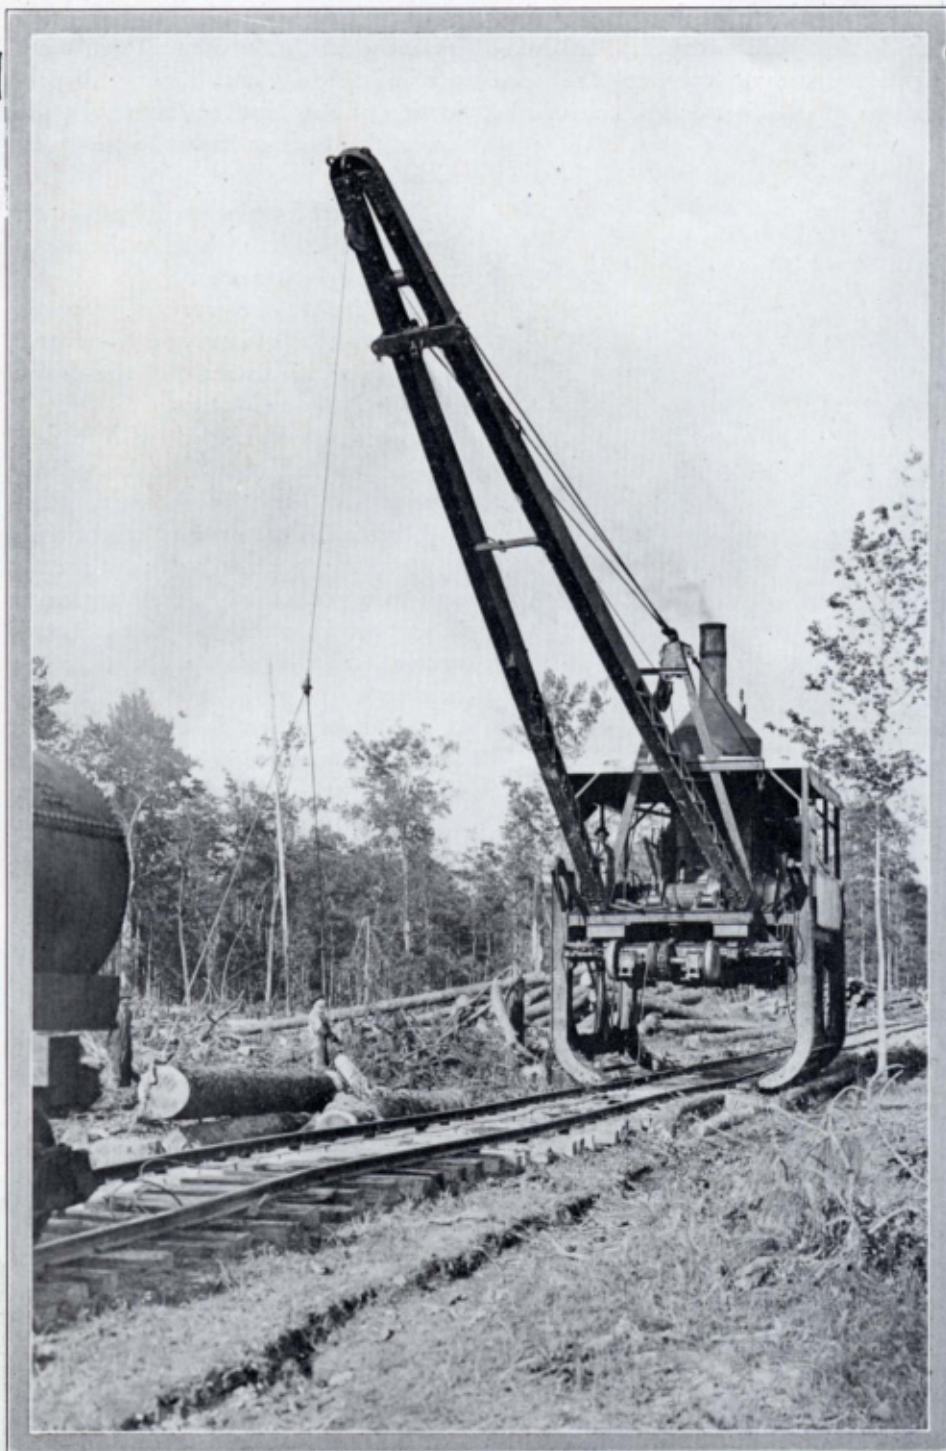

McGiffert Loader with trucks raised showing the clear space for passing cars through when trucks are raised.

