

ASK YOUR DEALER
OR WRITE DIRECT
TO FACTORY FOR . . .

Patented, Top Quality
OREGON®
CHISEL CHAIN
FILING
INSTRUCTIONS




Any Chisel Type Chain Requires Expert Filing

CHAIN SAW OPERATORS
ARE ENTHUSIASTIC ABOUT
TWO MAJOR ADVANTAGES OF
OREGON CHAIN
with FAST-FILE TOOTH




INSTALLING MASTER LINKS

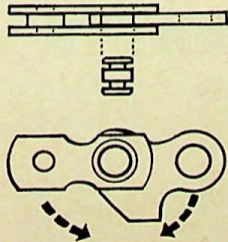

1. Line up master links with pin holes centered.
2. Insert drive link to be connected, lining up pin holes.
3. Bend master links and drive link downward as indicated by arrows, keeping holes centered.
4. Insert pin and straighten chain. Chain is then ready for use.
5. Do not hammer or otherwise secure pin.

INSTALLING NEW DRIVE LINKS

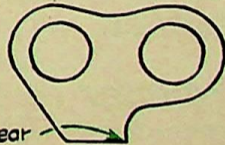

Point of hardest wear

The most common place of wear for drive links is the leading front corner. Wear at this point prevents the drive link from keeping the bar groove clean. In some cases it is possible to file the bottom of the drive link so that a new corner is put on the leading edge, thereby enabling it properly to clean out the bar groove. If the drive links are badly worn, you can install a few new ones throughout the chain so the groove will clean properly.