


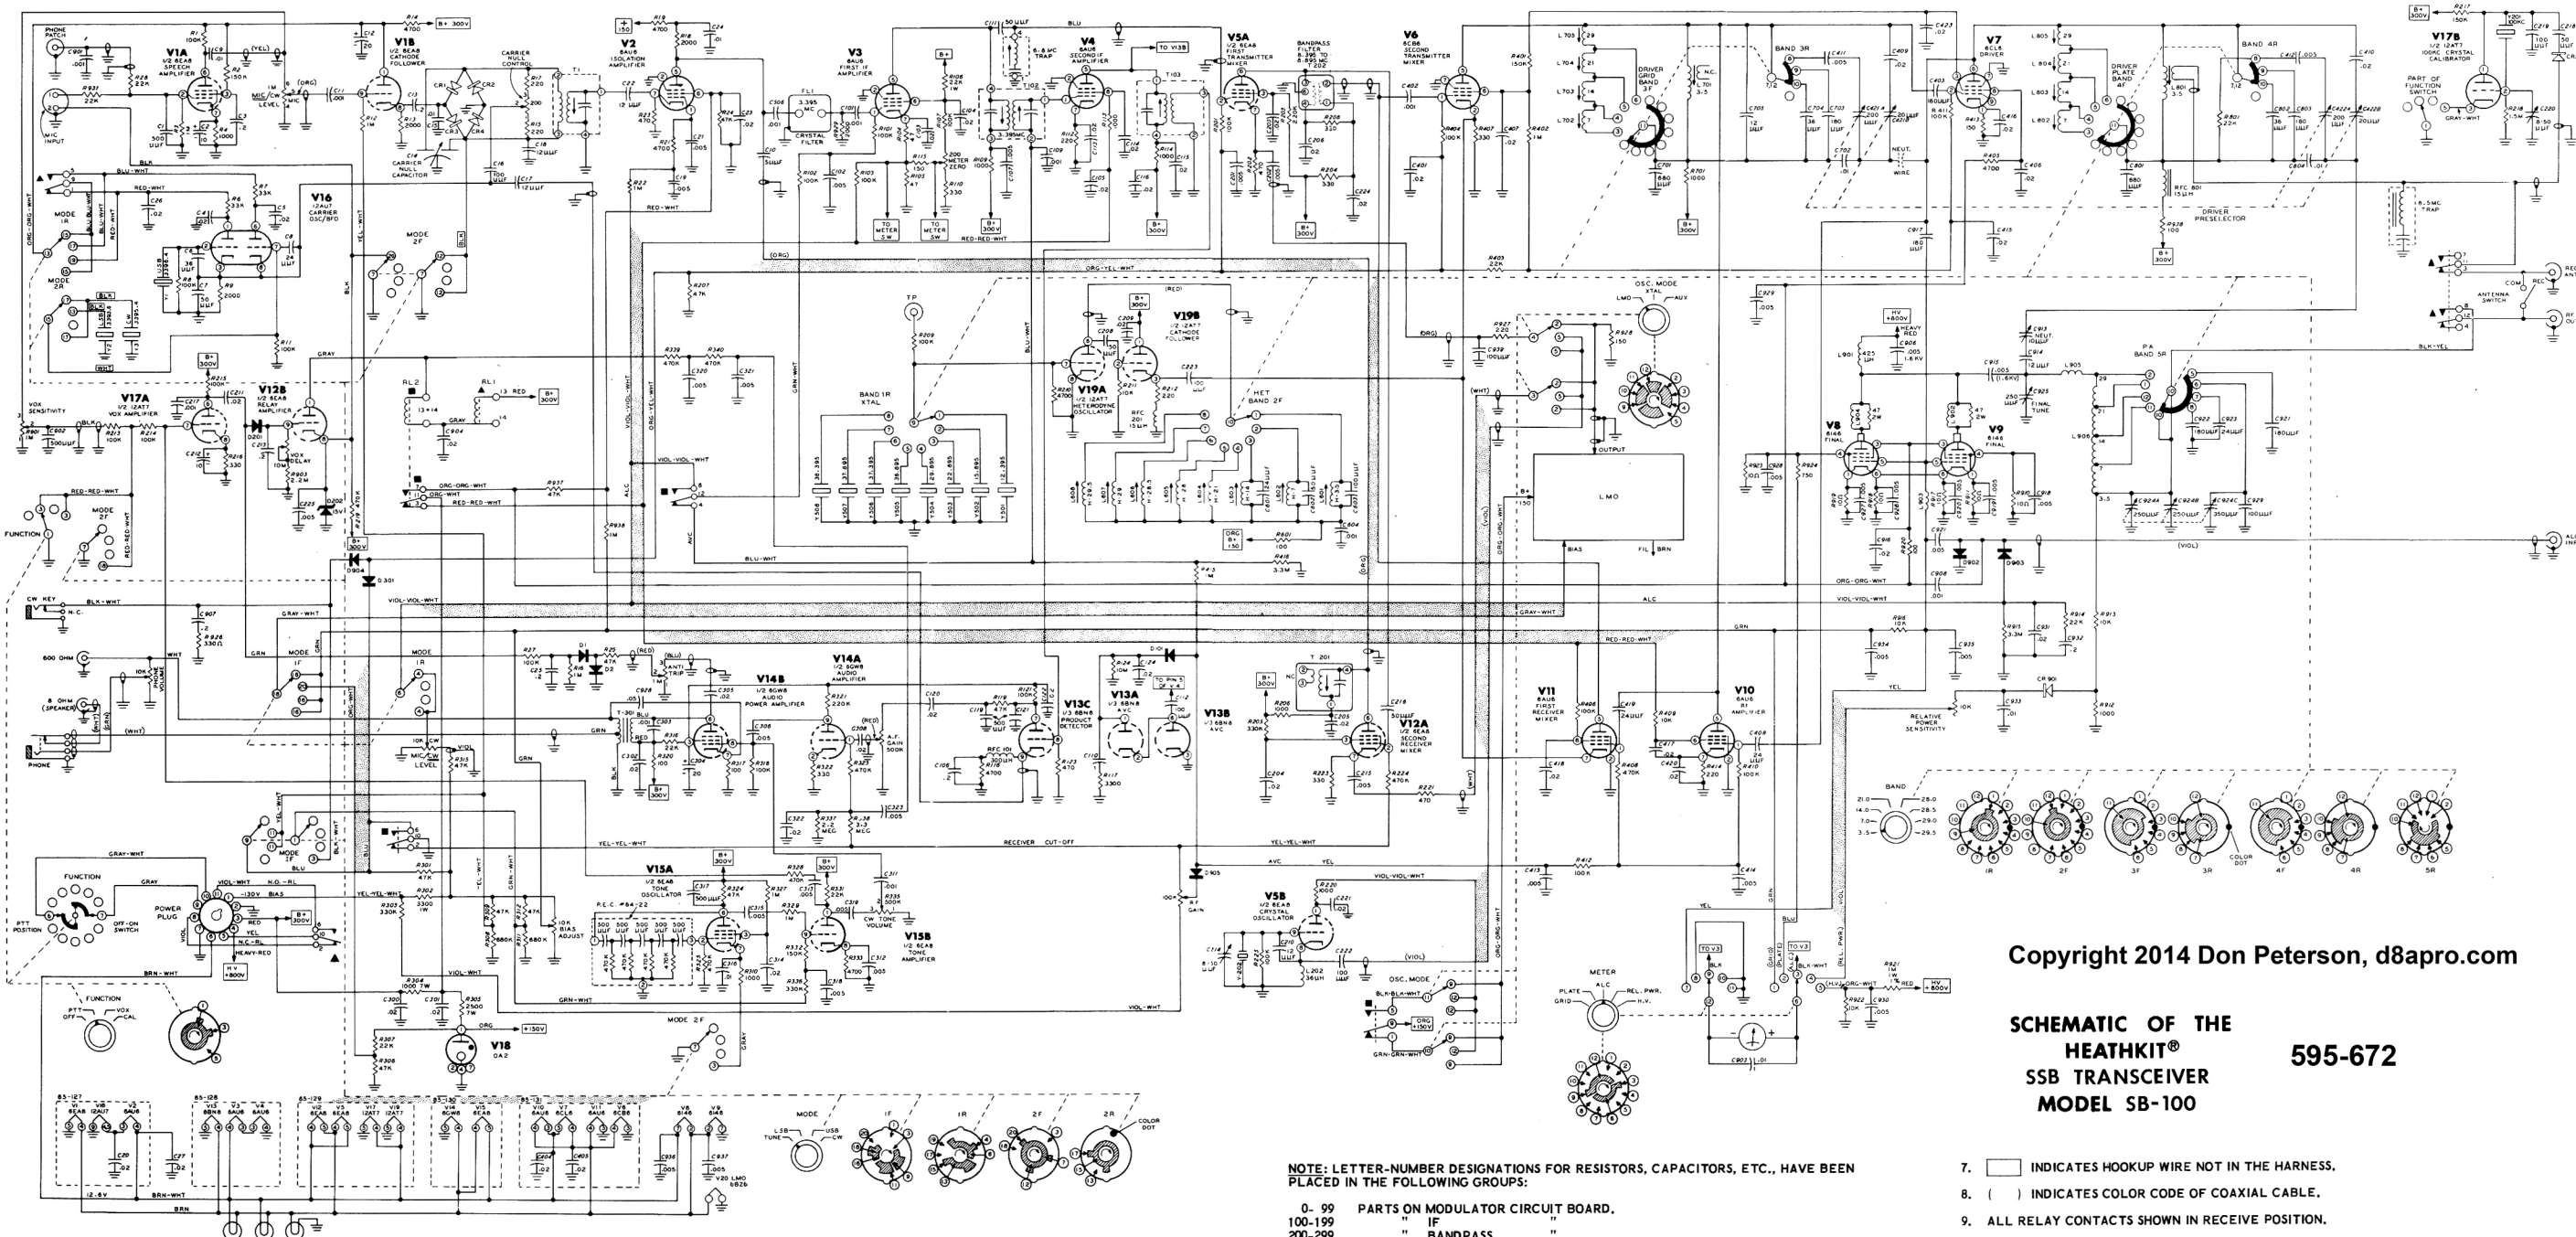

Copyright 2014 Don Peterson, d8apro.com

SCHEMATIC OF THE HEATHKIT® SSB TRANSCEIVER MODEL SB-100

- NOTE: LETTER-NUMBER DESIGNATIONS FOR RESISTORS, CAPACITORS, ETC., HAVE BEEN PLACED IN THE FOLLOWING GROUPS:**
- | | |
|---------|-------------------------------|
| 0-99 | IF |
| 100-199 | BANDPASS |
| 200-299 | AUDIO |
| 300-399 | RF-DRIVER |
| 400-499 | CRYSTAL |
| 500-599 | HETERODYNE |
| 600-699 | OSCILLATOR |
| 700-799 | DRIVER GRID |
| 800-899 | DRIVER PLATE |
| 900-999 | PARTS MOUNTED ON THE CHASSIS. |
- ALL RESISTORS ARE 1/2 WATT UNLESS MARKED OTHERWISE. ALL RESISTOR VALUES ARE IN OHMS (K = 1000, MEG = 1,000,000).
 - ALL CAPACITOR VALUES ARE IN μ F UNLESS MARKED OTHERWISE.
 - REFER TO THE X-RAY AND CHASSIS VIEWS FOR PHYSICAL LOCATION OF PARTS.
 - SEE THE VOLTAGE CHARTS (FOLD-OUT FROM PAGE 110) AND THE RESISTANCE CHART (FOLD-OUT FROM PAGE 111) FOR ALL MEASUREMENTS.
 - ALL SWITCHES ARE IN THE POSITION INDICATED BY THE KNOB POINTERS.
 - ARROW (↻) INDICATES CLOCKWISE ROTATION OF KNOB (VIEWED FROM KNOB END).

- INDICATES HOOKUP WIRE NOT IN THE HARNESS.
- () INDICATES COLOR CODE OF COAXIAL CABLE.
- ALL RELAY CONTACTS SHOWN IN RECEIVE POSITION.
- DIODE SYMBOLS ARE AS FOLLOWS: ∇ FOR GERMANIUM DIODES, $\blacktriangle$ FOR SILICON DIODES.
- FOR GREATER CLARITY, RELAY SECTIONS ARE SHOWN CLOSEST TO THE CIRCUITS IN WHICH THEY ARE USED. ONE OF THE FOLLOWING MARKS IS USED TO IDENTIFY THE SEPARATED SECTION OF THE RELAYS:
 $\triangle$ = PART OF RELAY RL1
 $\square$ = PART OF RELAY RL2
- SWITCH WAFERS ARE IDENTIFIED AS IN THE FOLLOWING EXAMPLE: